

FIRSTECH, LLC.
SUPPORT • 1(888) 820-3690, EXT. 203

Idle Mode is not a supported feature of the FTI-TLP4 Harness: The **Idle Mode** feature which allows the user to exit a running has been excluded from the **FTI-TLP4** harness wiring. *If this feature is desired, please refer to the full **BLADE** installation diagram for the applicable wiring and make the required connection to the vehicle PTS button.*

• FT-DAS Required for manual transmission.
• BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting			
Parking Light 			(+)Door Trigger In
Accessory 			(-)Door Trigger In (Default)
Ignition (Default) 			Starter
Trunk Parking Light (Default)			Ignition Accessory (Default)

CM7000/7200

Cut loop for A/T

CM-900S/900AS

CM900AS/900S Jumper


START

ACC

IGN1



FEATURE COVERAGE	
IMMOBILIZER DATA	○
TPMS CONTROL	○
ALARM OEM ALARM	○
DISARM OEM ALARM	○
A/M CONTROL FROM OEM REMOTES	○
A/M RS CONTROL	○
FRMO OEM REMOTE	○
PRIORITY UNLOCK	○
DOOR LOCK	○
DOOR UNLOCK	○
TRUNK/HATCH RELEASE	○
HATCH OUTPUT	○
BRAKE STATUS	○
E-BRAKE STATUS	○
DOOR STATUS	○
TRUNK STATUS	○
HOOD STATUS	○
PARKING LIGHTS	○
AUTOLIGHT CONTROL	○

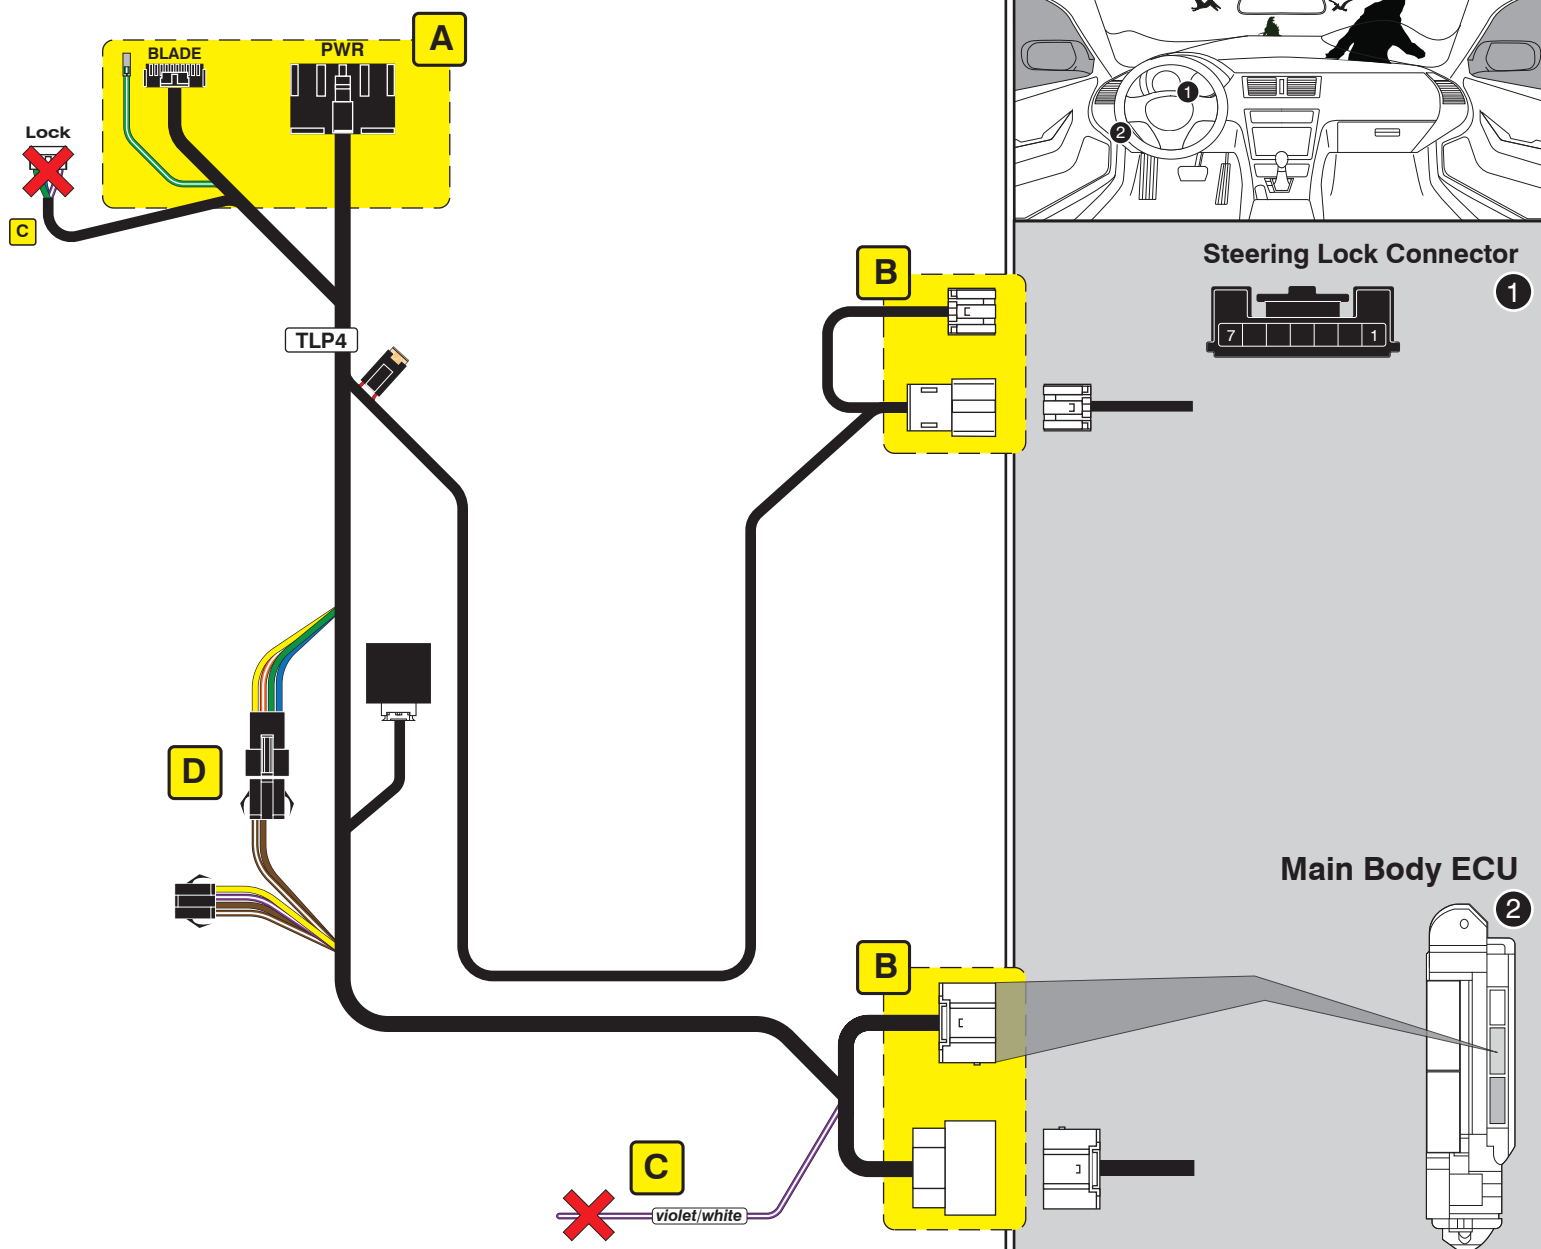


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No CAN detected, check connections
- 2x - VIN not read, check connections
- 3x - VIN unknown, force platform
- 4x - No IMMO
- 5x - OEM remote starter detected, remove
- 6x - Key platform detected, check connections
- 7x - No RX detected, check connections
- 8x - No TX detected, check connections

CARTRIDGE INSTALLATION

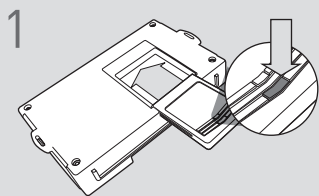

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE


I Between each step, LED will turn solid RED, this is the default standby mode.



1 Push start button twice [2x] to ON position.




2 LED will turn solid RED.




3 Within 5 seconds, LED will flash BLUE rapidly.



4 Push start button once [1x] to OFF position.

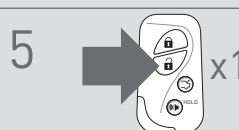

5 Press unlock button once [1x] on OEM keyfob.

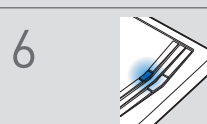

6 Wait, LED will turn solid BLUE for 2 seconds.

7

Module Programming Procedure completed.

TAKEOVER NOT AVAILABLE