


SKREEM Module Connector **1**

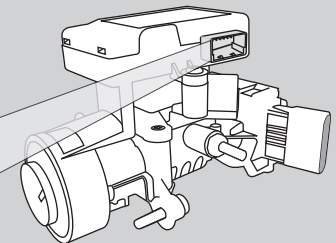

Ignition Switch Connector **2**


(Type 1 - Start & MUX connections)



*pink/stripe **
purple/brown

** blue*
** green*
** orange*

Headlight Switch Connector **3**

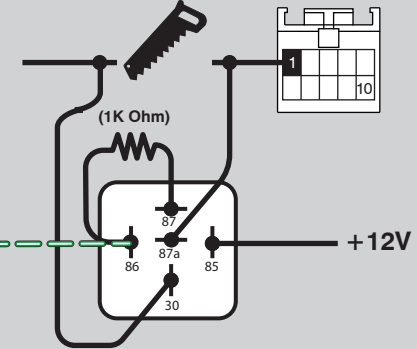

Driver's Kick Panel **4**


DRIVER DOOR

purple

LED Programming Error Codes

- Module LED flashing RED during programming
- 1x - CAN Error, check CAN wiring and voltages
 - 2x - Immobilizer, check wiring, press button to skip
 - 3x - Immobilizer, check wiring, contact support
 - 4x - VIN, Check CAN wiring
 - 5x - VIN invalid, contact support
 - 6x - VIN mismatch, confirm firmware and vehicle entry

CARTRIDGE INSTALLATION

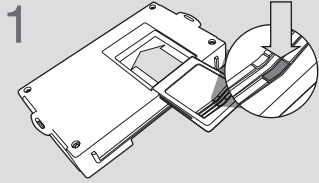

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE



1 Insert key into ignition.



2 Turn key to ON position.




3 LED will turn solid RED.



4 Within 5 seconds, LED will flash BLUE rapidly.



5 Turn key to OFF position.



6 Remove key.



7 Press UNLOCK on the OEM remote.

If vehicle is not equipped with OEM remote, press module programming button.



8 Wait, LED will turn solid BLUE for 2 seconds.

9

Module Programming Procedure completed.