



SKREEM Module Connector

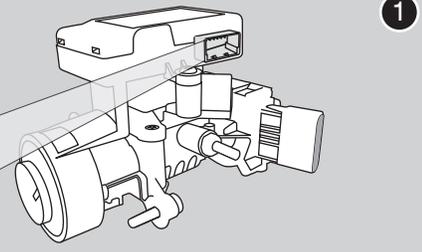


Driver kick panel harness

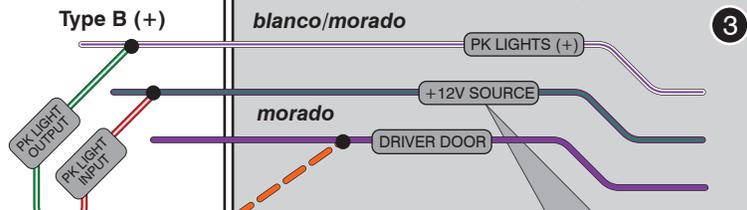

Fuente de alimentación de +12 V
La solución CH5 es una solución de bajo consumo de corriente. Fuentes de poder adecuadas para la ENTRADA DE LUZ PK se puede encontrar en todo el vehículo, generalmente en proximidad a la ubicación en la que elige hacer el estacionamiento conexión de luz, los circuitos comunes de + 12VDC son ROJOS o AMARILLOS/ROJOS típicamente fusionado a 15A o más. Las ubicaciones de los circuitos de uso común están en El conector OBD-II (pin # 16), amplificador del sistema de audio, arnés arriba la guantera, y en los arneses del panel de patada. Todos los cuales son adecuados.

C

CARTRIDGE INSTALLATION

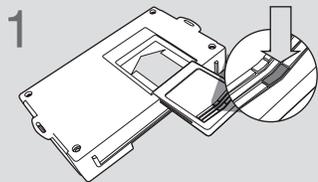

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE



1 Insert key into ignition.



2 Turn key to ON position.

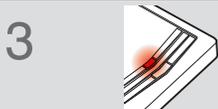


3 LED will turn solid RED.



4 Within 5 seconds, LED will flash BLUE rapidly.



5 Turn key to OFF position.

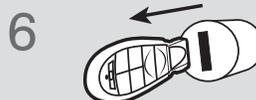

6 Remove key.



7 Press UNLOCK on the OEM remote.

If vehicle is not equipped with OEM remote, press module programming button.



8 Wait, LED will turn solid BLUE for 2 seconds

9

Module Programming Procedure completed.