









SKREEM Module Connector ①

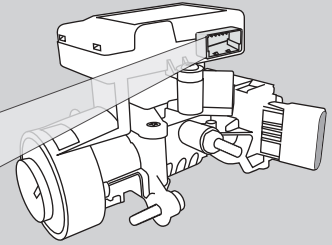


Headlight Switch Connector ②

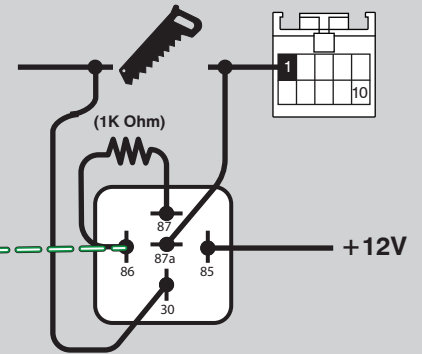

Driver's Kick Panel ③

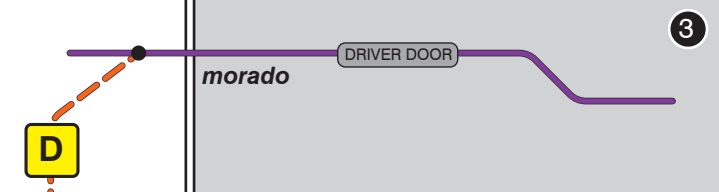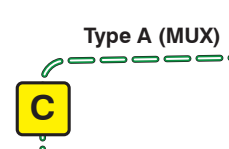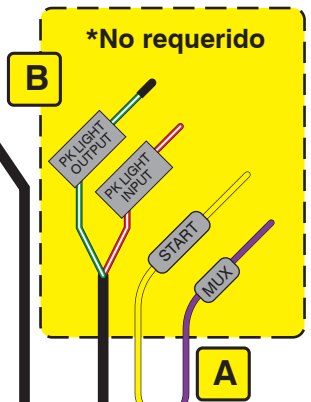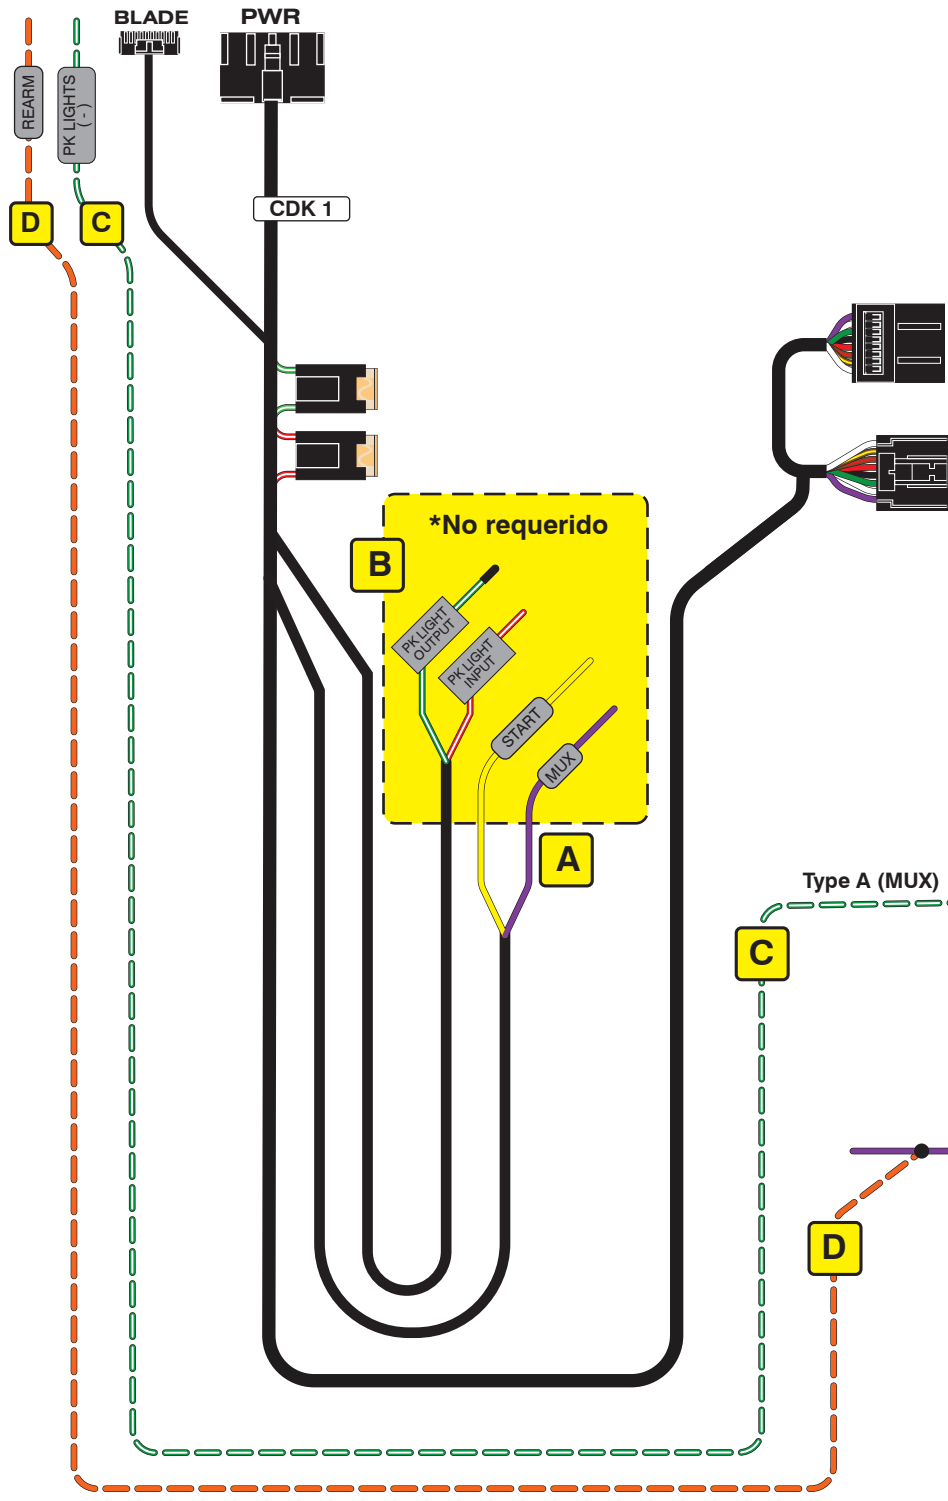

CARTRIDGE INSTALLATION

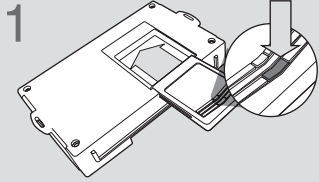

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE



1 Insert key into ignition.



2 Turn key to ON position.




3 LED will turn solid RED.



4 Within 5 seconds, LED will flash BLUE rapidly.



5 Turn key to OFF position.




6 Remove key.



7 Press UNLOCK on the OEM remote.

If vehicle is not equipped with OEM remote, press module programming button.



8 Wait, LED will turn solid BLUE for 2 seconds

9

Module Programming Procedure completed.