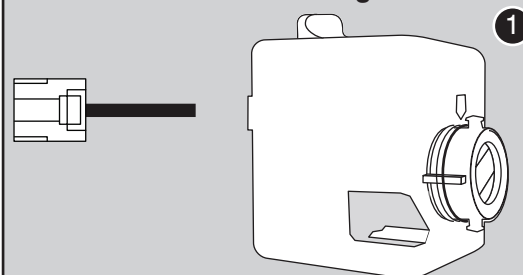


Wireless Ignition Node



Headlight Switch



Driver kick panel harness

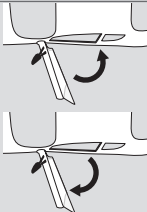
Morado (-) **4**


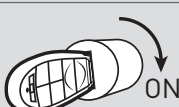
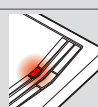
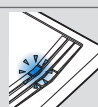
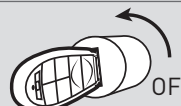


Códigos de error de programación de LED

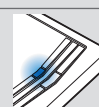
El LED del módulo parpadea en ROJO durante la programación

- 1x - CAN problema
- 2x - Inmovilizador (confirme que el vehículo está equipado, presione el botón si no)
- 3x - Inmovilizador (confirme que el vehículo comienza con la llave)
- 4x - Sin información VIN
- 5x - VIN no coincide (póngase en contacto con soporte)

MODULE PROGRAMMING PROCEDURE

- | | | |
|----|--|---|
| 1 |  | Close driver door.

Re-open driver door to wake up data bus. |
| 2 |  | Insert key into ignition. |
| 3 |  | Turn key to ON position. |
| 4 |  | LED will turn solid RED. |
| 5 |  | Within 5 seconds, LED will flash BLUE rapidly. |
| 6 |  | Turn key to OFF position. |
| 7 |  | Remove key. |
| 8 |  | Press UNLOCK on the OEM remote.

If vehicle is not equipped with OEM remote, press module programming button. |
| 9 |  | Wait, LED will turn solid BLUE for 2 seconds. |
| 10 | | Module Programming Procedure completed. |

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE


- All vehicle doors must be closed and locked prior to remote start sequence.

 **TIME RESTRICTION COMING UP !**



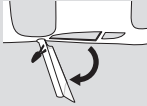



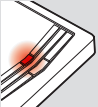
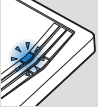
- | | | |
|---|--|--|
| 1 |  | Press UNLOCK on after-market remote. |
| 2 |  | TIME RESTRICTION
Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle. |
| 3 |  | Insert key into ignition. |
| 4 |  | Turn key to ON position.

Wait 2 seconds for key validation. |
| 5 |  | Press and release BRAKE pedal. |
| 6 | | Take over procedure completed. |

 Failure to follow procedure within time restriction will result in vehicle engine shutdown.

MODULE PROGRAMMING PROCEDURE - PUSH TO START

- | | | | | | |
|---|--|--|--|--|--|
| 1 |  | Close driver door. | | | |
| |  | Re-open driver door to wake up data bus. | | | |
| 2 |  | DO NOT PRESS BRAKE PEDAL
Push start button twice [2x] to ON position. | | | |
| 3 |  | LED will turn solid RED. | | | |
| 4 |  | Within 5 seconds, LED will flash BLUE rapidly. | | | |
| 5 |  | DO NOT PRESS BRAKE PEDAL
Push start button once [1x] to OFF position. | | | |
| 6 |  | Press UNLOCK on the OEM remote. | | | |
| 7 |  | Wait, LED will turn solid BLUE for 2 seconds. | | | |
| 8 | | Module Programming Procedure completed. | | | |

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT



- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PUSH TO START - TO THE VEHICLE OWNER


NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.

 TIME RESTRICTION COMING UP !

- | | | | | | |
|---|--|--|--|--|--|
| 1 |  | Press UNLOCK on after-market remote. | | | |
| 2 |  | TIME RESTRICTION
Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle. | | | |
| 3 |  | DO NOT PRESS BRAKE PEDAL
Push start button twice [2x] to ON position.

Wait 2 seconds for key validation. | | | |
| 4 |  | Press and release BRAKE pedal. | | | |
| 5 | | Take over procedure completed. | | | |
| |  | Failure to follow procedure within time restriction will result in vehicle engine shutdown. | | | |