FTI-CDK2: Vehicle Coverage and Preparation Notes

F	RSTECH,LLC.
	SUPPORT - 1(888) 820-3690, EXT 2

202

Make	Model	Year	Install	CAN	Lights	RAP	POC	I/O Changes
DL-CH4 Dodge	Grand Caravan Tip-Start	2011-20	Type 2	WIN	Park / Auto Type B	DDP		Green White/Blue
5			51		51			

Firmware: Vehicle requires **BLADE-AL(DL)-CH4** firmware, flash module and update the controller firmware before beginning the installation.


CAN: In the event that troubleshooting is necessary, CAN connections are located in the connector at the vehicle WIN (Wireless Ignition Node).

Lights: Type B MUX type parking lights are populated in the supplied 10-pin headlight switch connector on the harness assembly, properly secure the unused 6-pin connector for safety.

RAP: RAP shutdown handling for all other covered vehicles is at the driver door pin wire, *purple* wire located in the driver kick panel harness, circuit tests (-) negative with door open

FTI-CDK2 - Installation and Configuration Notes

Α	RAP shutdown	shutdown connection, configure POC for RAP (option #31).														•	•FT-DAS Required for manual transmission. •BOTH Red & Red/White MUST be connected with high current application.									
В	WTS (Wait to start) for diesel applications.																Jumper Setting Parking Light TTTT(+)Door Trigger In									
															Ľ	lgnition (Default) 🔲 Trunk 🗐 Starter 🗐		Door Trigger In Default								
22	NNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNNN														CM900AS/											
14	FEATURE COVERAGE														5000	oump										
MM N		0	0	0	\square		_	0	0	<u> </u>	0	0	0	0	0	0	0	0	0	-						
WWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWWW		IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM DISARM OEM ALARM		POWER LIFTGATE	NEE ORE	POWER SLIDING DOOR (R)	DOOR STATUS	TRUNK STATUS	RAP SHUTDOWN	BRAKE STATUS	E-BRAKE STATUS	ТАСН ОՍТРИТ	DATA/MUX IGNITION	SECURE TAKEOVER	PARKING LIGHTS				START A ACC I IGN1			

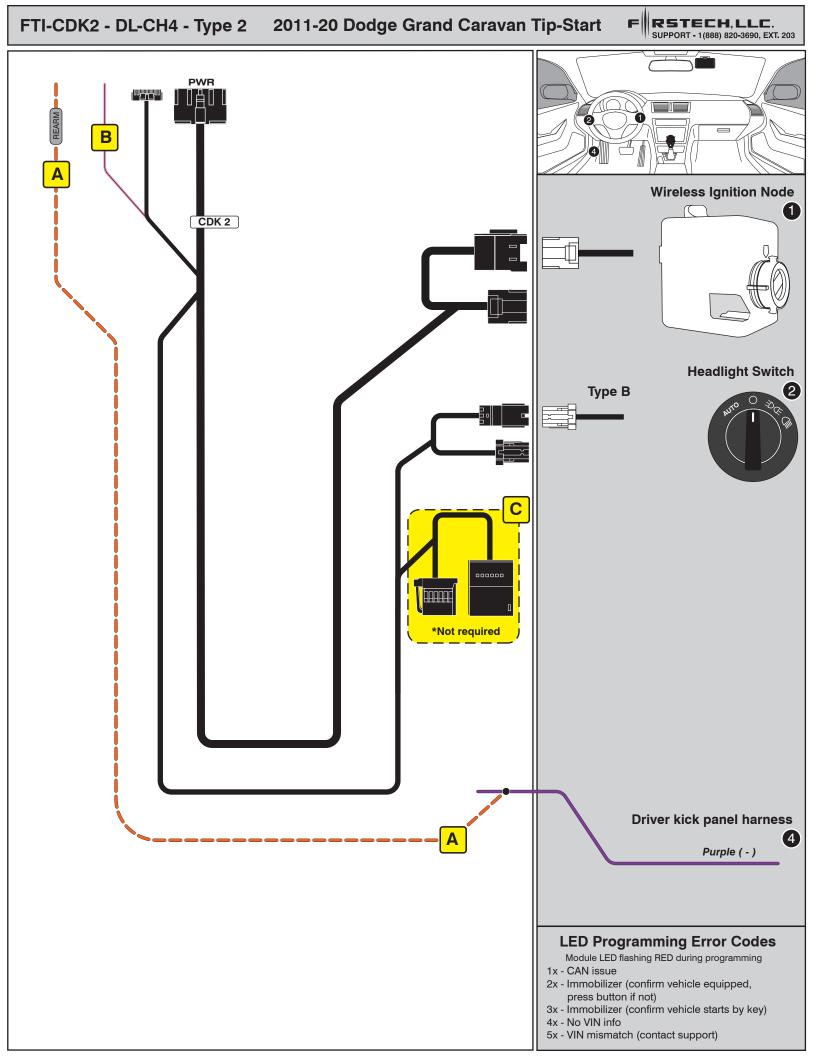

INSTALL GUIDE


BLADE

ALL IN ONE CHRYSLER/DODGE/JEEP

Patent No. US 8,856,780 CA 2759622

COM-BLADE-AL(DL)-CH4-EN

Doc. No.: ##70115## 20200320

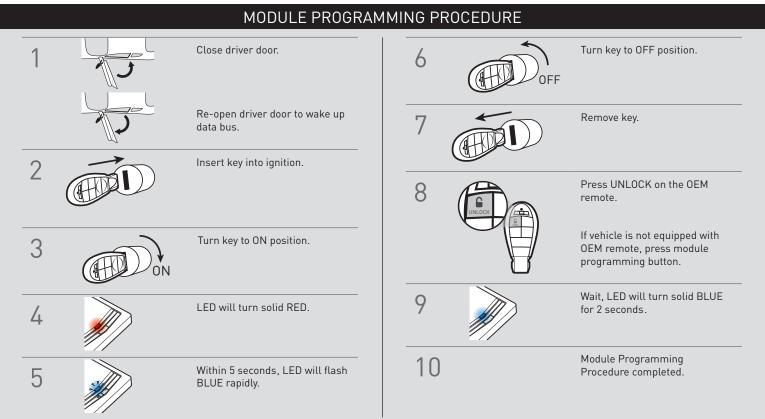



WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

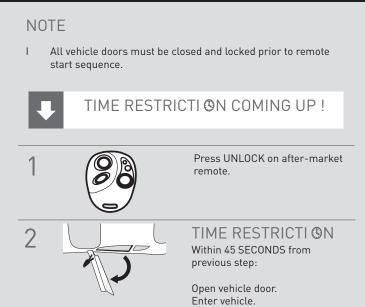

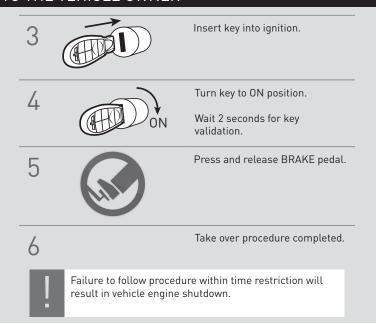

INSTALL GUIDE


BLADE

ALL IN ONE CHRYSLER/DODGE/JEEP

Patent No. US 8,856,780 CA 2759622

COM-BLADE-AL(DL)-CH4-EN

Doc. No.: ##70115## 20200320

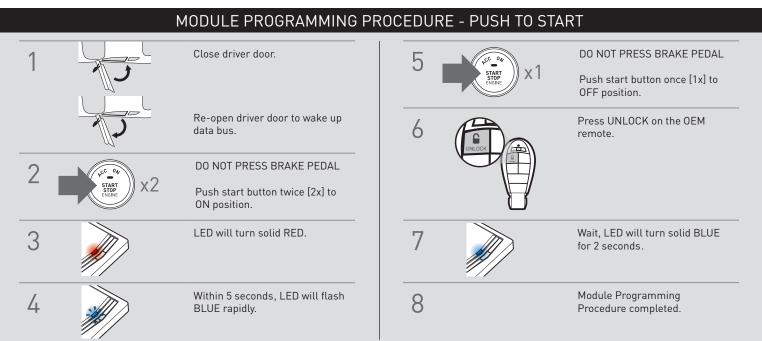

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PUSH TO START - TO THE VEHICLE OWNER

NOTE

I All vehicle doors must be closed and locked prior to remote start sequence.



