FTI-CDK2: Vehicle Coverage and Preparation Notes

F	RSTECH,LLC.
1	SUPPORT - 1(888) 820-3690, EXT, 20

	+ 50FF011 - 1(000) 020-3090, EAI, 203														
Make	Model	Year	Install	CAN	Lights	RAP	POC	I/O Changes							
DL-CH4					Park / Auto			Green White/Blue							
Jeep	Grand Cherokee Tip-Start	2011-13	Type 1	WIN	Type A	DDP									

Firmware: Vehicle requires **BLADE-AL(DL)-CH4** firmware, flash module and update the controller firmware before beginning the installation.


CAN: In the event that troubleshooting is necessary, CAN connections are located in the connector at the vehicle WIN (Wireless Ignition Node).

Lights: Type A MUX type parking lights are populated in the supplied 6-pin headlight switch connector on the harness assembly, properly secure the unused 10-pin connector for safety

RAP: RAP shutdown handling for all other covered vehicles is at the driver door pin wire, *purple* wire located in the driver kick panel harness, circuit tests (-) negative with door open.

FTI-CDK2 - Installation and Configuration Notes

A B C	RAP shutdown connection, configure POC for RAP (option #31). WTS (Wait to start) for diesel applications. Connection not required.																n. In						
																	CM7000/7200 CM7000/7200 Cut loop for Accessory II CM7000/7200 Cut loop for Accessory II						
L'HA	* WWWWWWWWW								-EAT	ŪF	RE C	0\	/EF	RA	GE							CM900AS/900S Jump	ber
THH		0	0	\bigcirc	$oldsymbol{\circ}$	\bigcirc							$oldsymbol{\circ}$	$oldsymbol{0}$	igodol	igodol	$oldsymbol{\circ}$	0	igodol		1		
MMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM		MMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM		RELEASE					AP SHUTDOWN	BRAKE STATUS	E-BRAKE STATUS	АСН ОИТРИТ	DATA/MUX IGNITION	SECURE TAKEOVER	PARKING LIGHTS			START	

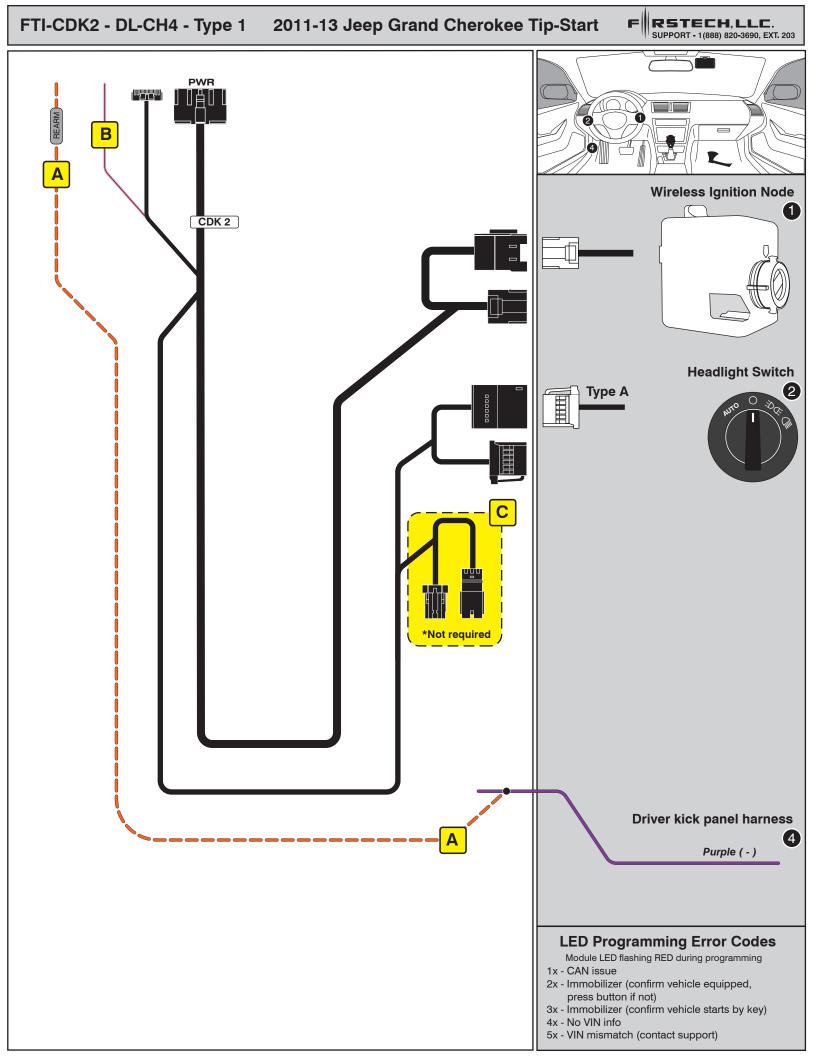

INSTALL GUIDE


BLADE

ALL IN ONE CHRYSLER/DODGE/JEEP

Patent No. US 8,856,780 CA 2759622

COM-BLADE-AL(DL)-CH4-EN

Doc. No.: ##70115## 20200320

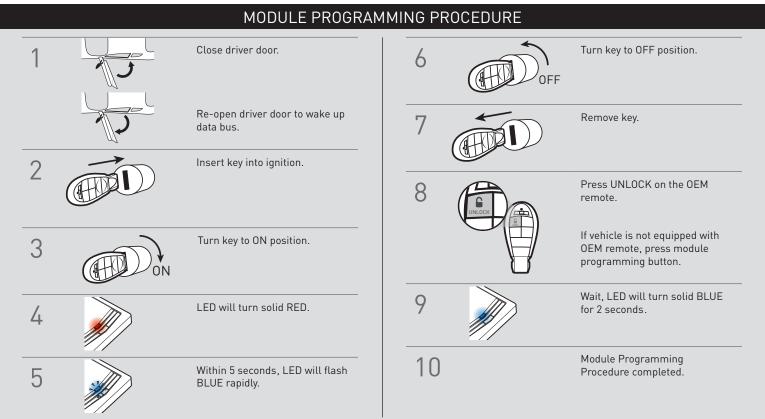



WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

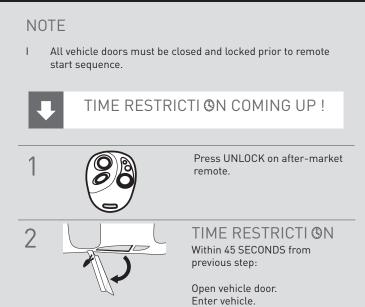

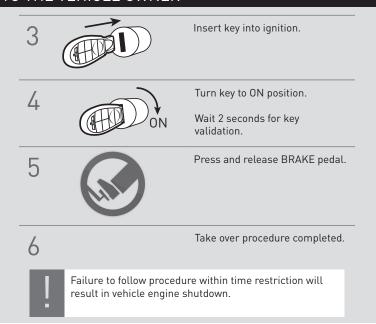

INSTALL GUIDE


BLADE

ALL IN ONE CHRYSLER/DODGE/JEEP

Patent No. US 8,856,780 CA 2759622

COM-BLADE-AL(DL)-CH4-EN

Doc. No.: ##70115## 20200320

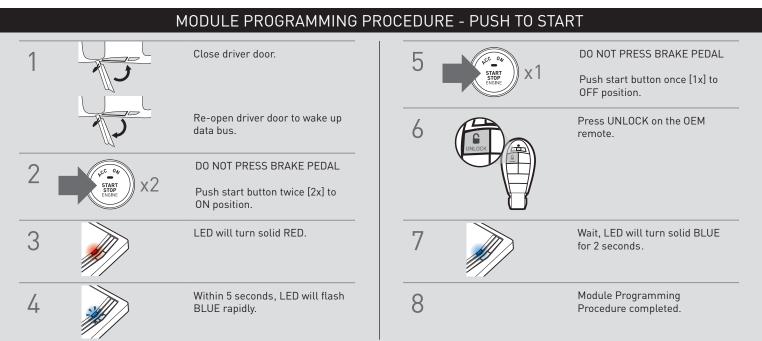

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PUSH TO START - TO THE VEHICLE OWNER

NOTE

I All vehicle doors must be closed and locked prior to remote start sequence.



