## FTI-CDP1: Vehicle Coverage and Preparation Notes

F RSTECH, LLC.

|                 | T SUPPORT - 1(886) 820-3090, EA1, 20, |         |         |        |                       |     |      |                  |  |  |
|-----------------|---------------------------------------|---------|---------|--------|-----------------------|-----|------|------------------|--|--|
| Make            | Model                                 | Year    | Install | CAN    | Lights                | IGN | Hood | I/O Changes      |  |  |
| DL-CH7<br>Dodge | Dart PTS                              | 2013-16 | Type 1  | OBD-II | Park / Auto<br>Type A | BCM | BCM  | Green White/Blue |  |  |

**Firmware:** Covered vehicles use **BLADE-AL(DL)-CH7**, confirm application, flash module, and update the controller firmware before beginning the installation.

CAN: Type 1 vehicles use CAN connections in harness at OBD-II, the included CAN extension is not required for this install type.

**Lighting:** Type A parking lights use the 6-pin connector, please ensure that the unused 10-pin connector is properly secured for safety.

**Ignition:** Common ignition provisions are listed in the BLADE diagram, ignition is also available at the vehicle BCM (connector C5/E, *pink/white*, pin #27).

FEATURE COVERAGE

000

BRAKE STATUS

CH OUTPUT

AP SHUTDOWN

OOR STATUS RUNK STATUS **ARE STATUS** 

00

ECURE TAKEOVER

**RKING LIGHTS** 

000

Hood: Hood status wire is available at the vehicle BCM, connector C1, pin #11 (violet/blue).

## FTI-CDP1 - Installation and Configuration Notes

 $\bigcirc$ 

**MOBILIZER DATA** 

RIORITY UNLOCK

JOR UNLOCK

OOR LOCK


A Required CAN connections.
B Not Required.
C Hood pin connection.
D Ignition jumper, NO CONNECTION required.
E Ignition connection.


00

RUNK/HATCH

SARM OEM ALARI

IM OEM ALARM

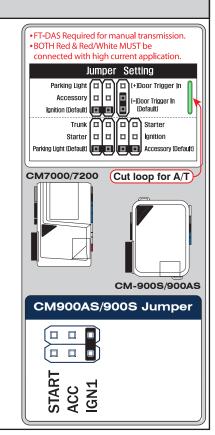

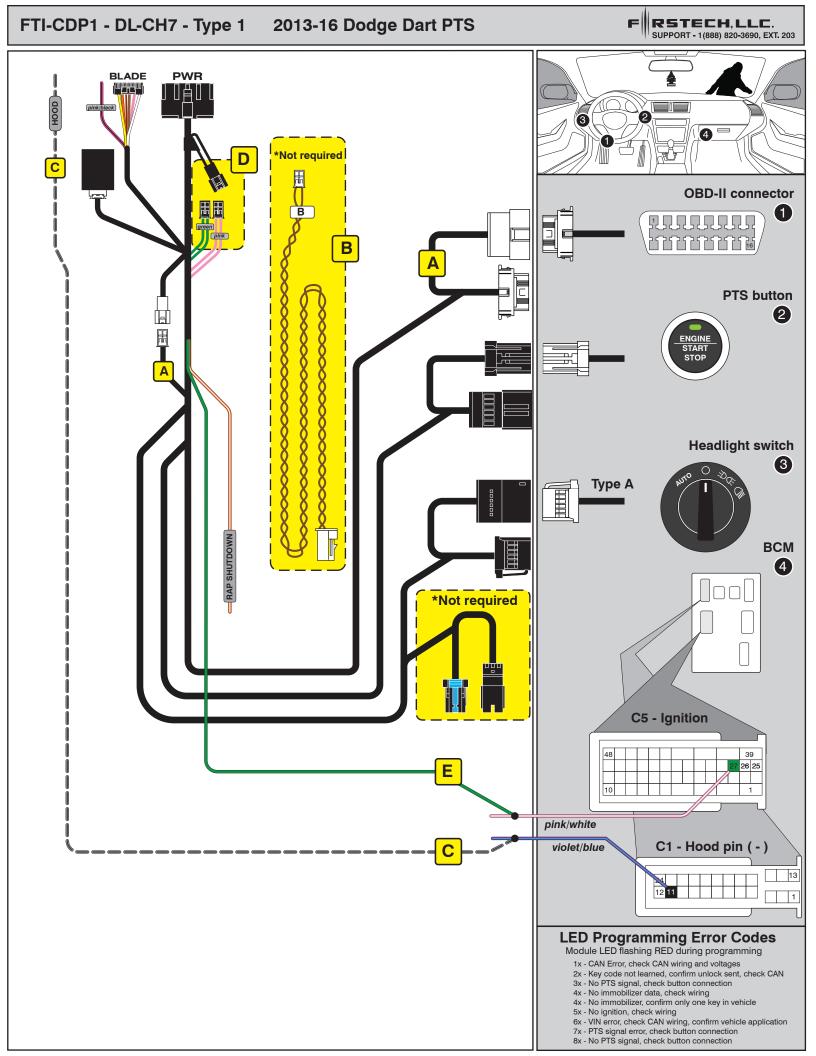

# INSTALL GUIDE


| B | _90    |  |
|---|--------|--|
|   | SERIES |  |

## ALL IN ONE CHRYSLER/DODGE/JEEP/RAM

Patent No. US 8,856,780 CA 2759622 COM-BLADE-AL(DL)-CH7-EN

CARTRIDGE INSTALLATION


Doc. No.: ##72396## 20201117

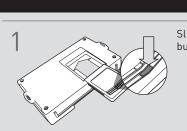

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

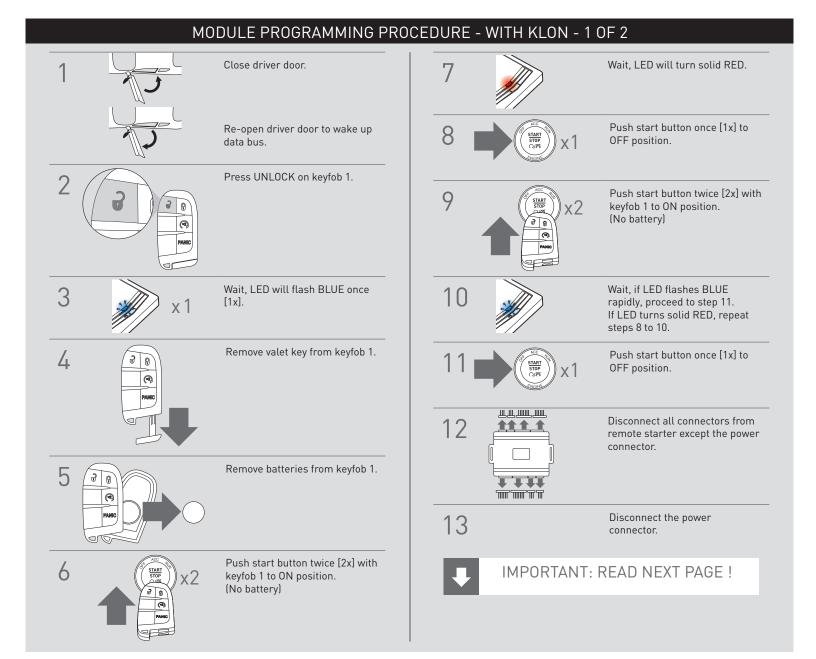


#### WWW.IDATALINK.COM

# INSTALL GUIDE

| BLADE  |  |
|--------|--|
| SERIES |  |

ALL IN ONE CHRYSLER/DODGE/JEEP/RAM

Patent No. US 8,856,780 CA 2759622

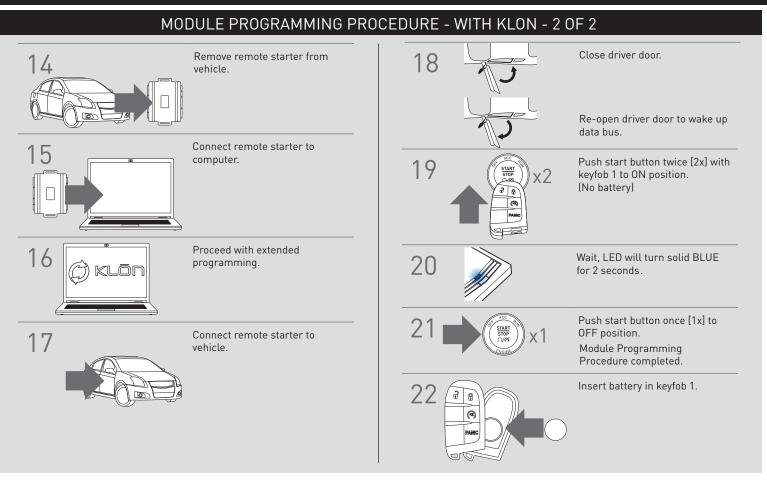

### WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

### **IMPORTANT**

I All OEM keyfobs must be at least 10 feet away from the vehicle. All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

