
FTI-CDP1: Vehicle Coverage and Preparation Notes F RSTECH, LLC. SUPPORT - 1(888) 820-3690, EXT 203 CAN Lights IGN Make Model Year Install I/O Changes Hood DL-CH7 Park / Auto Green White/Blue Dodge Journey PTS 2018-20 Type 2 CJB Type A BCM BCM Firmware: Covered vehicles use BLADE-AL(DL)-CH7, flash module and update the controller firmware before installing. Install: Type 2 vehicles use the included CAN extension cable to source CAN data from the green CAN junction block (left side of the dash) or from the BCM (pin#25, CANH, brown, pin #26, CANL, yellow). Lighting: Type A parking lights use the 6-pin connector, secure the unused 10 pin connector for safety. Ignition: Common ignition provisions are listed in the BLADE diagram, ignition is also available at the vehicle BCM (connector C5/E, pin #27, pink/white). Hood: Hood status wire is available at the vehicle BCM, connector C1, pin #11 (violet/blue). FTI-CDP1 - Installation and Configuration Notes Required CAN connections. Α • FT-DAS Required for manual transmission. •BOTH Red & Red/White MUST be connected with high current application. Not Required. Jumper Setting B Parking Light T (+)Door Trigger In Accessory (-)Door Trigger In Hood pin connection. С (Default) Trunk TO Starter Starter D D D D Ignition Ignition jumper, NO CONNECTION required. D Parking Light (Default) CM7000/7200 Ignition connection. Cut loop for A/T Ε CM-900S/900AS FEATURE COVERAGE CM900AS/900S Jumper \bigcirc \mathbf{O} 000 $| \circ |$ \circ 000 \bigcirc $| \bigcirc$ \bigcirc \bigcirc SARM OEM ALARM ECURE TAKEOVER **MMOBILIZER DATA** RIORITY UNLOCK IM OEM ALARM BRAKE STATUS **RKING LIGHTS AP SHUTDOWN AKE STATUS** JOR UNLOCK **IUNK STATUS JOR STATUS** CH OUTPUT START DOR LOCK ACC IGN1

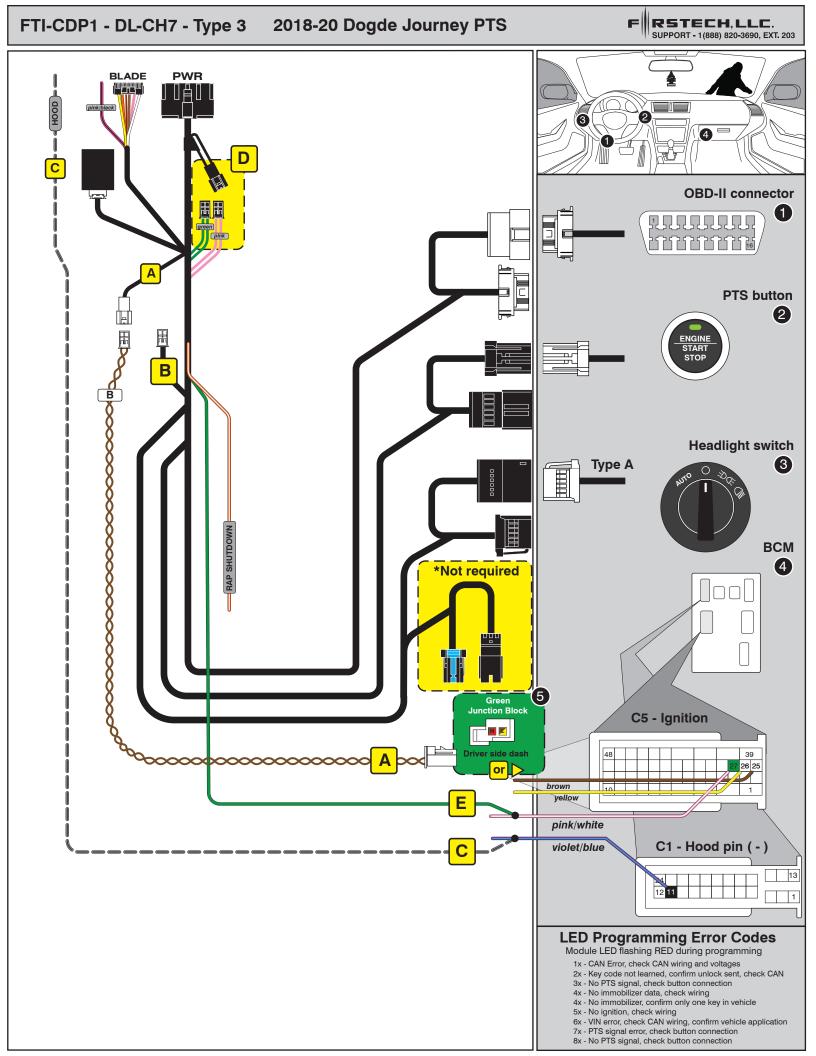

INSTALL GUIDE


B	_90	
	SERIES	

ALL IN ONE CHRYSLER/DODGE/JEEP/RAM

Patent No. US 8,856,780 CA 2759622 COM-BLADE-AL(DL)-CH7-EN

CARTRIDGE INSTALLATION


Doc. No.: ##72396## 20201117

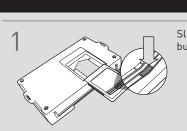

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

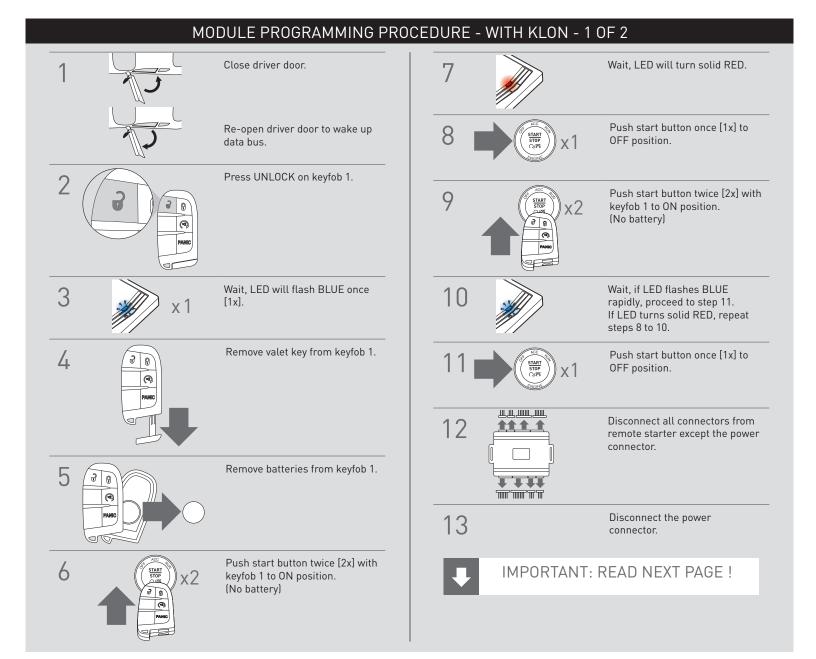


WWW.IDATALINK.COM

INSTALL GUIDE

BLADE	
SERIES	

ALL IN ONE CHRYSLER/DODGE/JEEP/RAM

Patent No. US 8,856,780 CA 2759622

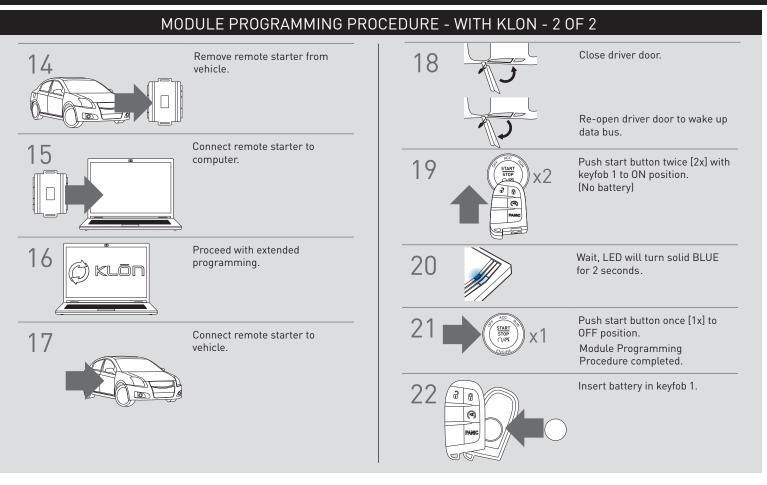

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

I All OEM keyfobs must be at least 10 feet away from the vehicle. All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

