

FTI-GMT3: Vehicle Coverage and Preparation Notes

Make	Model	Year	Install	CAN	Lights	Type	BCM	Configuration
DL-GM12 Chevrolet	Silverado 2500 STD Key AT with OnStar	2017-19	Type 1	Type A	Park / Auto Type A	Key	LSC	Feature Option None

Firmware: This installation uses **BLADE-AL(DL)-GM12**, flash module and update the controller firmware before installing.

Install: **Type 1** installation sources CAN data from the blue connector of the BCM, requiring the use of the '**A-connector**', the connector marked 'B' is not used.

Lights: **Type A** lights (standard parking lights) are provided, as are **Type H** (hazard lights), both incorporated in the harness for visual display of runtime status/diagnostics. Re-pinning of the CM I/O (gray) harness is required, regardless of which type you choose to use, both options have been provided for your selection. If you choose hazards you will also need to configure the selected POC for one of the following hazard control options, **Hazard1** (POC option #30 (momentary) **or** **Hazard2** (POC option #23 (latching)), depending on hazard switch operation.

Locks: The CM lock connector is not required for this installation type. Door locks are handled via OnStar data signals so analog connections are not necessary. Secure the harness connector as needed.

Lock connector is NOT REQUIRED for this installation type. :)

FTI-GMT3 - Installation and Configuration Notes

- A** REQUIRED CONNECTION, SEE NOTE ABOVE
- B** CONNECTION NOT REQUIRED
- C** REQUIRED CONFIGURATION - TYPE A
- D** REQUIRED CONFIGURATION - KEY TYPE



FEATURE COVERAGE													
IMMOBILIZER DATA													
DOOR LOCK													
DOOR UNLOCK													
ARM OEM ALARM													
DISARM OEM ALARM													
3X LOCK START													
DOOR STATUS													
RAP SHUTDOWN													
BRAKE STATUS													
E-BRAKE STATUS													
TACH OUTPUT													
DATA/MUX IGN/ST													
HOOD STATUS													
SECURE TAKEOVER													
PARKING LIGHTS													
HAZARD LIGHTS													

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.


Jumper Setting			
Parking Light			(+)Door Trigger In
Accessory			(-)Door Trigger In
Ignition (Default)			
Trunk			Starter
Starter			Ignition
Parking Light (Default)			Accessory (Default)

CM7000/7200 **Cut loop for A/T**

CM-900S/900AS

CM900AS/900S Jumper

START
ACC
IGN1

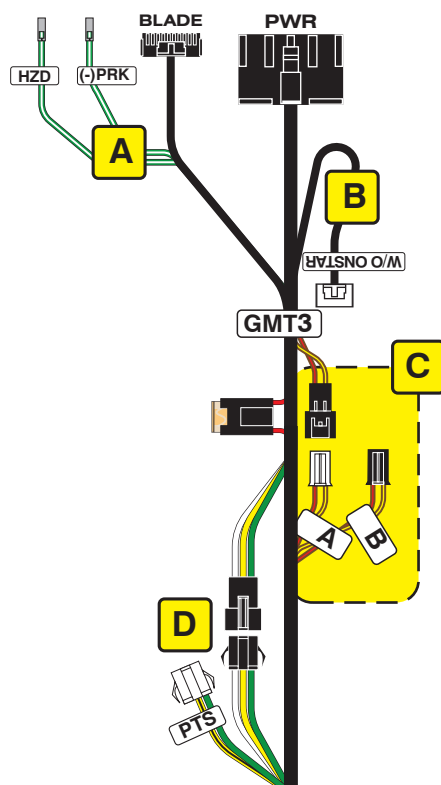

Pink and Green

Blue

White

BCM


1

LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No ACC power, check GREEN connector
- 2x - MUX status not detected, check GREEN connector
- 3x - No IGN, check GREEN connector
- 4x - No HSCAN activity, check BLUE connector
- 5x - No SWC activity, check BLUE connector
- 6x - Wrong SWC message, confirm key has been removed
- 7x - No ACC power, check GREEN connector
- 8x - No immobilizer data, check GREEN & BLADE connectors
- 9x - IGN ON, confirm key has been removed
- 10x - Keysense active, confirm key has been removed
- 11x - No ACC, confirm key is on
- 12x - No IGN, confirm key is on
- 13x - VIN not matching Weblink data, contact engineering

CARTRIDGE INSTALLATION

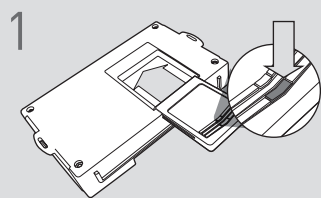


Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE - WITH KLON




Close driver door.
Re-open driver door to wake up data bus.



Insert key into ignition.




Turn key to ON position.



Wait, LED will turn solid RED.




Turn key to OFF position.



Remove key.



LED will turn OFF.



Insert key into ignition.




Turn key to ON position.




Wait, LED will flash BLUE rapidly.




Turn key to OFF position.

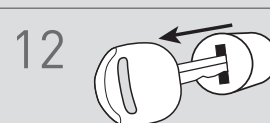


Remove key.

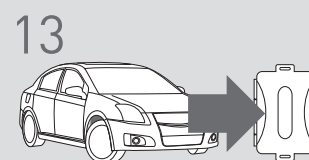


WARNING:
Disconnect power last.
Disconnect module from vehicle.

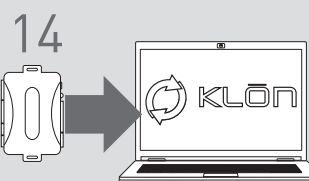

Connect module to computer
and proceed with extended
programming.

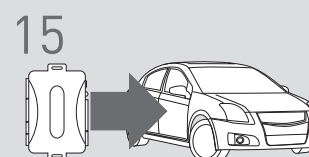


WARNING: Do not press module
programming button.
Connect power first.
Connect module to vehicle.




Close driver door.
Re-open driver door to wake up
data bus.



Turn key to ON position.



Wait, LED will turn solid BLUE
for 2 seconds.



Turn key to OFF position.

20

Module Programming
Procedure completed.