

FIRSTECH, LLC.
SUPPORT • 1(888) 820-3690, EXT. 203


Locks: The CM lock connector is not required for this installation type. Secure as needed.




FTI-GMT3 - Installation and Configuration Notes

- A** REQUIRED CONNECTION, SEE NOTE ABOVE
- B** NOT REQUIRED
- C** REQUIRED CONFIGURATION - TYPE A
- D** REQUIRED CONFIGURATION - KEY TYPE



FEATURE COVERAGE					
IMMOBILIZER DATA	☐				
PRIORITY UNLOCK	☐				
DOOR LOCK	☐				
DOOR UNLOCK	☐				
ARM OEM ALARM	☐				
SISARM OEM ALARM	☐				
TRUNK/HATCH RELEASE	☐				
DOOR STATUS	☐				
TRUNK STATUS	☐				
HAP SHUTDOWN	☐				
BRAKE STATUS	☐				
E-BRAKE STATUS	☐				
AIRCH OUTPUT	☐				
DATA/MUX IGN/ST	☐				
HOOD STATUS	☐				
SECURE TAKEOVER	☐				
PARKING LIGHTS	☐				
HAZARD LIGHTS	☒				

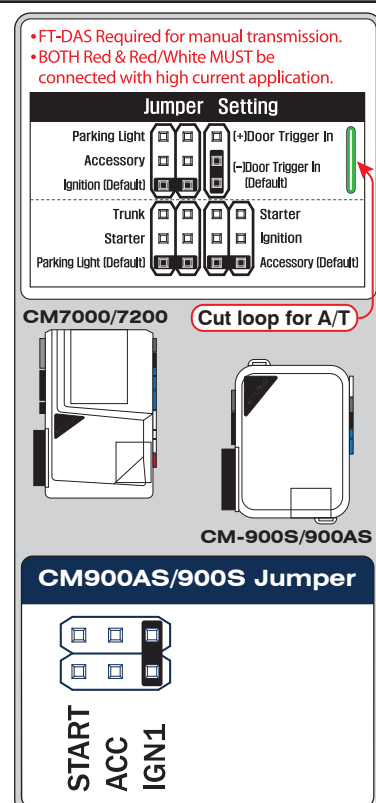

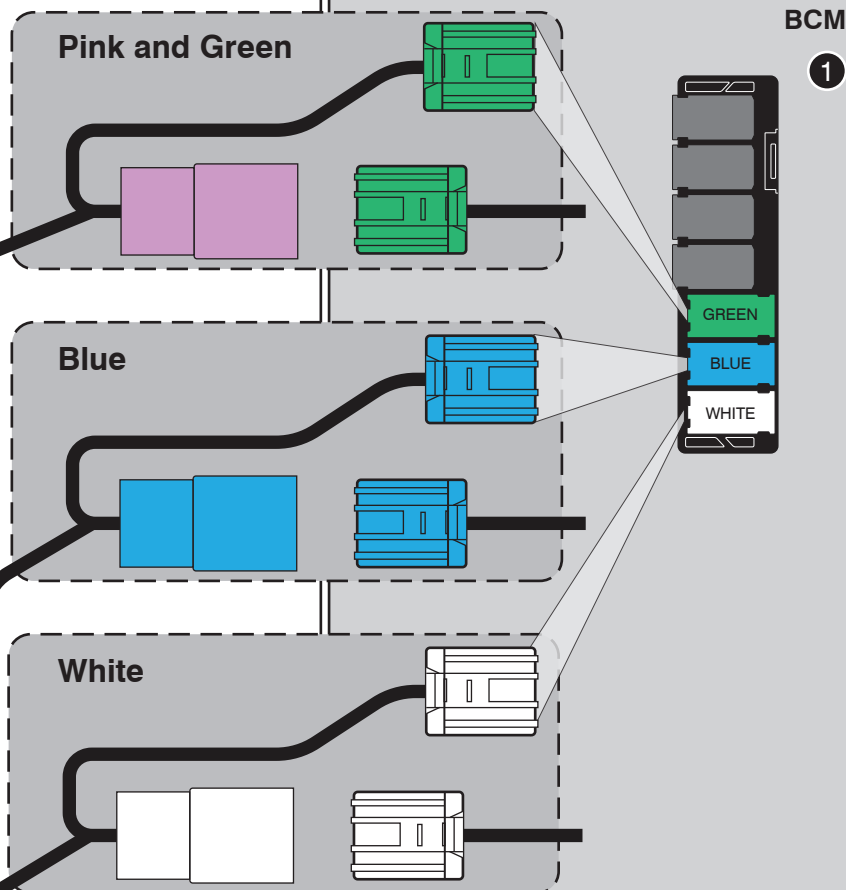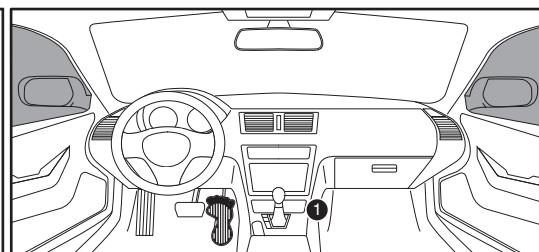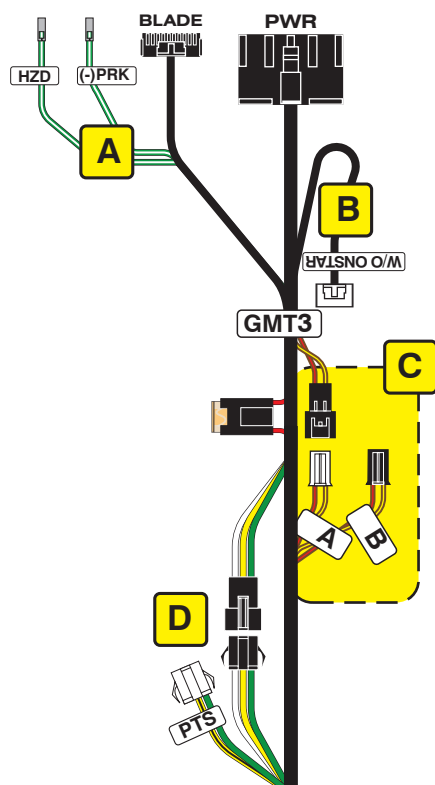


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No ACC power, check GREEN connector
- 2x - MUX status not detected, check GREEN connector
- 3x - No IGN, check GREEN connector
- 4x - No HSCAN activity, check BLUE connector
- 5x - No SWC activity, check BLUE connector
- 6x - Wrong SWC message, confirm key has been removed
- 7x - No ACC power, check GREEN connector
- 8x - No immobilizer data, check GREEN & BLADE connectors
- 9x - IGN ON, confirm key has been removed
- 10x - Keysense active, confirm key has been removed
- 11x - No ACC, confirm key is on
- 12x - No IGN, confirm key is on
- 13x - VIN not matching Weblink data, contact engineering

CARTRIDGE INSTALLATION

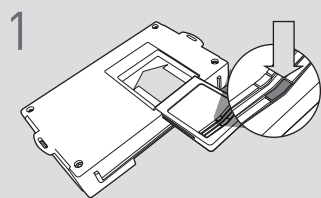


Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE



Insert key into ignition.




Turn key to ON position.




Wait, LED will flash BLUE rapidly.




Turn key to OFF position.



Remove key.



LED will turn solid RED.




Insert key into ignition.




Turn key to ON position.




LED will turn OFF.



Turn key to OFF position.



Remove key.

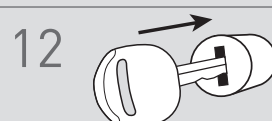

Insert key into ignition.



Turn key to ON position.



Wait, LED will turn solid BLUE for 2 seconds.



Turn key to OFF position.

16

Module Programming Procedure completed.