FTI-HDK2: Vehicle Coverage and Preparation Notes

F	RSTECH, LLC. SUPPORT - 1(888) 820-3690, EXT. 203
'	SUPPORT - 1(888) 820-3690, EXT. 203

Make	Model	Year	Install	IMMO	Lights	всм	POC	I/O Changes	
DL-HA3 Honda	Civic Hybrid STD Key AT	2012-13	Type 3	Gray	Park / Auto Type B	N/A		Green White/Blue N/A	

Firmware:

This installation requires **BLADE-AL(DL)-HA3** firmware, flash module and update the controller firmware before the installation.

Install:

Type 3 vehicles use the gray 7-pin immobilizer adapter and the 8-pin CN1 adapter, green 7-pin immobilizer adapter is not required.

Lights:

The included lighting adapter is not compatible with this vehicle, analog parking light connections will need to be made.

Civic & Civic Hybrid:

Negative parking lights are available at the headlight switch (gray wire, pin #8, of the 12-pin connector). Positive parking lights are available at the fuse-junction box (red wire, pin #29, of the green 44-pin connector).

CR-V:

Negative parking lights are available at the headlight switch (blue wire, pin #8, of the 12-pin connector). Auto-light connection is available at the headlight switch (orange wire, pin #1, of the 12-pin connector).


This installation does not use the included adapter, so no configuration is necessary.


FTI-HDK2: Installation and Configuration Notes

- A CONNECTION REQUIRED
- B CONNECTION REQUIRED
- CONNECTION REQUIRED, SEE LIGHTS NOTE
- NOT REQUIRED
- E NOT REQUIRED



	FEATURE COVERAGE																			
0	0	0	0	0	0	0				0	0	0	0	0	0	0		0		
IMMOBILIZER DATA	A/M CONTROL	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE				DOOR STATUS	TRUNK STATUS	HOOD STATUS	BRAKE STATUS	E-BRAKE STATUS	тасн оитрит	AUTOLIGHT CTRL		PARKING LIGHTS		

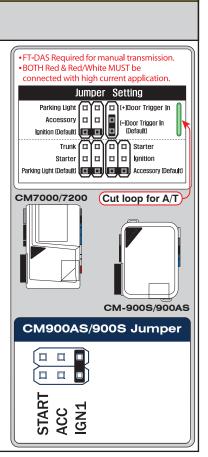

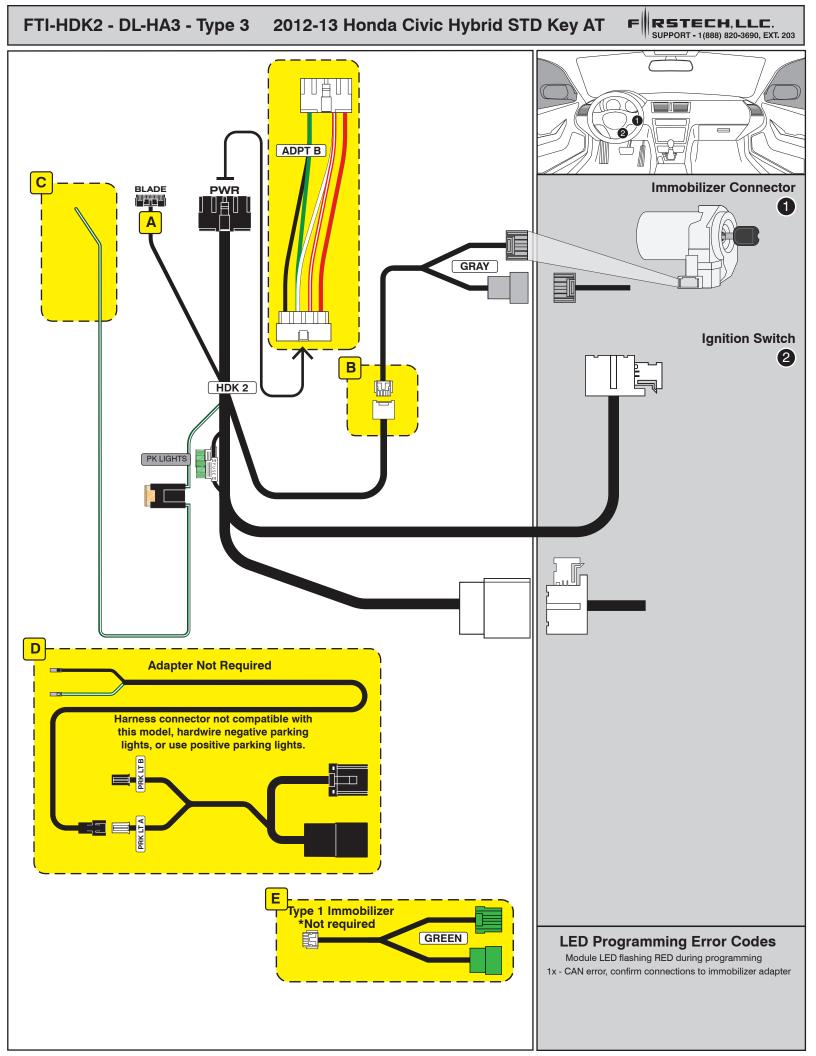




ALL IN ONE HONDA/ACURA

Patent No. US 8,856,780 CA 2759622

Page 8 of 9 COM-BLADE-AL(DL)-HA3-EN 20191205 Doc. No.: ##66899##

CARTRIDGE INSTALLATION



Slide cartridge into unit. Notice button under LED.

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

Insert key into ignition.



Turn key to OFF position.



Turn key to ON position.

for 2 seconds.



Press UNLOCK on the OEM remote.



If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.



Module Programming Procedure completed.