

Make	Model	Year	Install	BCM	Lights	Locks	POC 1	I/O Changes
DL-NI4 Nissan	Xterra STD Key AT w/OEM Alarm	2005-15	Type 2	RSC	Park / Auto NI-LOCK*	Type A	Hazard1/2	Green White/Blue START2/ACC

Intstall **Type 2** requires **BLADE-AL(DL)-NI4**, flash module and update the controller firmware before beginning the installation.

I/O Changes: Each vehicle in this installation group have different configuration requirements for proper handling of ACC and START circuit handling. Please ensure that the appropriate changes have been made before testing. **The required changes are listed below.**

CM900S/900AS I/O Changes:

START2: Set feature option **1-6-2** (starter output 10A max), connect **green/white** to **yellow** (2nd START) at configuration point [C]

ACC: Move CM jumper to ACC to change CN1 **blue** wire to accessory, connect to **blue** (2nd ACC) at configuration point [C]

Optional Hazard Light Control:

NI-LOCK harness **green/white** is pre-wired for hazards, connect harness wire to the controller POC1 (**green/white**), additional configuration required. Vehicles equipped with a MOMENTARY activation switch require that POC1 be configured for **Hazard light** (POC option #30), if the switch is LATCHING type you will use **Hazard light 2** (POC option #23).

Auto-Light OFF:

NI-LOCK harness **orange** is pre-wired for Auto-light shut off, if the vehicle is equipped with auto-lights connect CM REARM output (**orange**) to the **orange** wire in harness.

D

NI-LOCK harness configuration: Configure Double Pulse Unlock (**feature 1-04, option 2**) Door locks are analog via the **white** 6-pin connector. Type A lock configuration is also required, connect **white** 2-pin female housing to **black** 2-pin plug [A].

NI-LOCK* vehicles require additional wiring and a relay to open the auto-light shutdown loop provided on the NI-LOCK harness.

FTI-NSK1: Installation and Configuration Notes

- A** CUT REQUIRED - INSULATE AFTER CUTTING
- B** REQUIRED CONNECTION - USE JUMPER IF NO IMMOBILIZER
- C** CONNECT AS ILLUSTRATED
- D** CONNECT AS ILLUSTRATED
- E** CONNECT AS ILLUSTRATED



FEATURE COVERAGE														
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
IMMOBILIZER DATA	SECURE TAKEOVER	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	A/M ALARM CTRL	A/M RS CONTROL	TRUNK/HATCH RELEASE	DOOR STATUS	HOOD STATUS	TRUNK STATUS	BRAKE STATUS	TACHOMETER


- FT-DAS Required for manual transmission.
- BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting

Parking Light	Accessory	Ignition (Default)	Trunk	Starter	Parking Light (Default)	(+)Door Trigger In (Default)	(-)Door Trigger In (Default)	Starter Ignition	Accessory (Default)
---------------	-----------	--------------------	-------	---------	-------------------------	------------------------------	------------------------------	------------------	---------------------


CM900AS/900S Jumper

START	ACC	IGN1
-------	-----	------

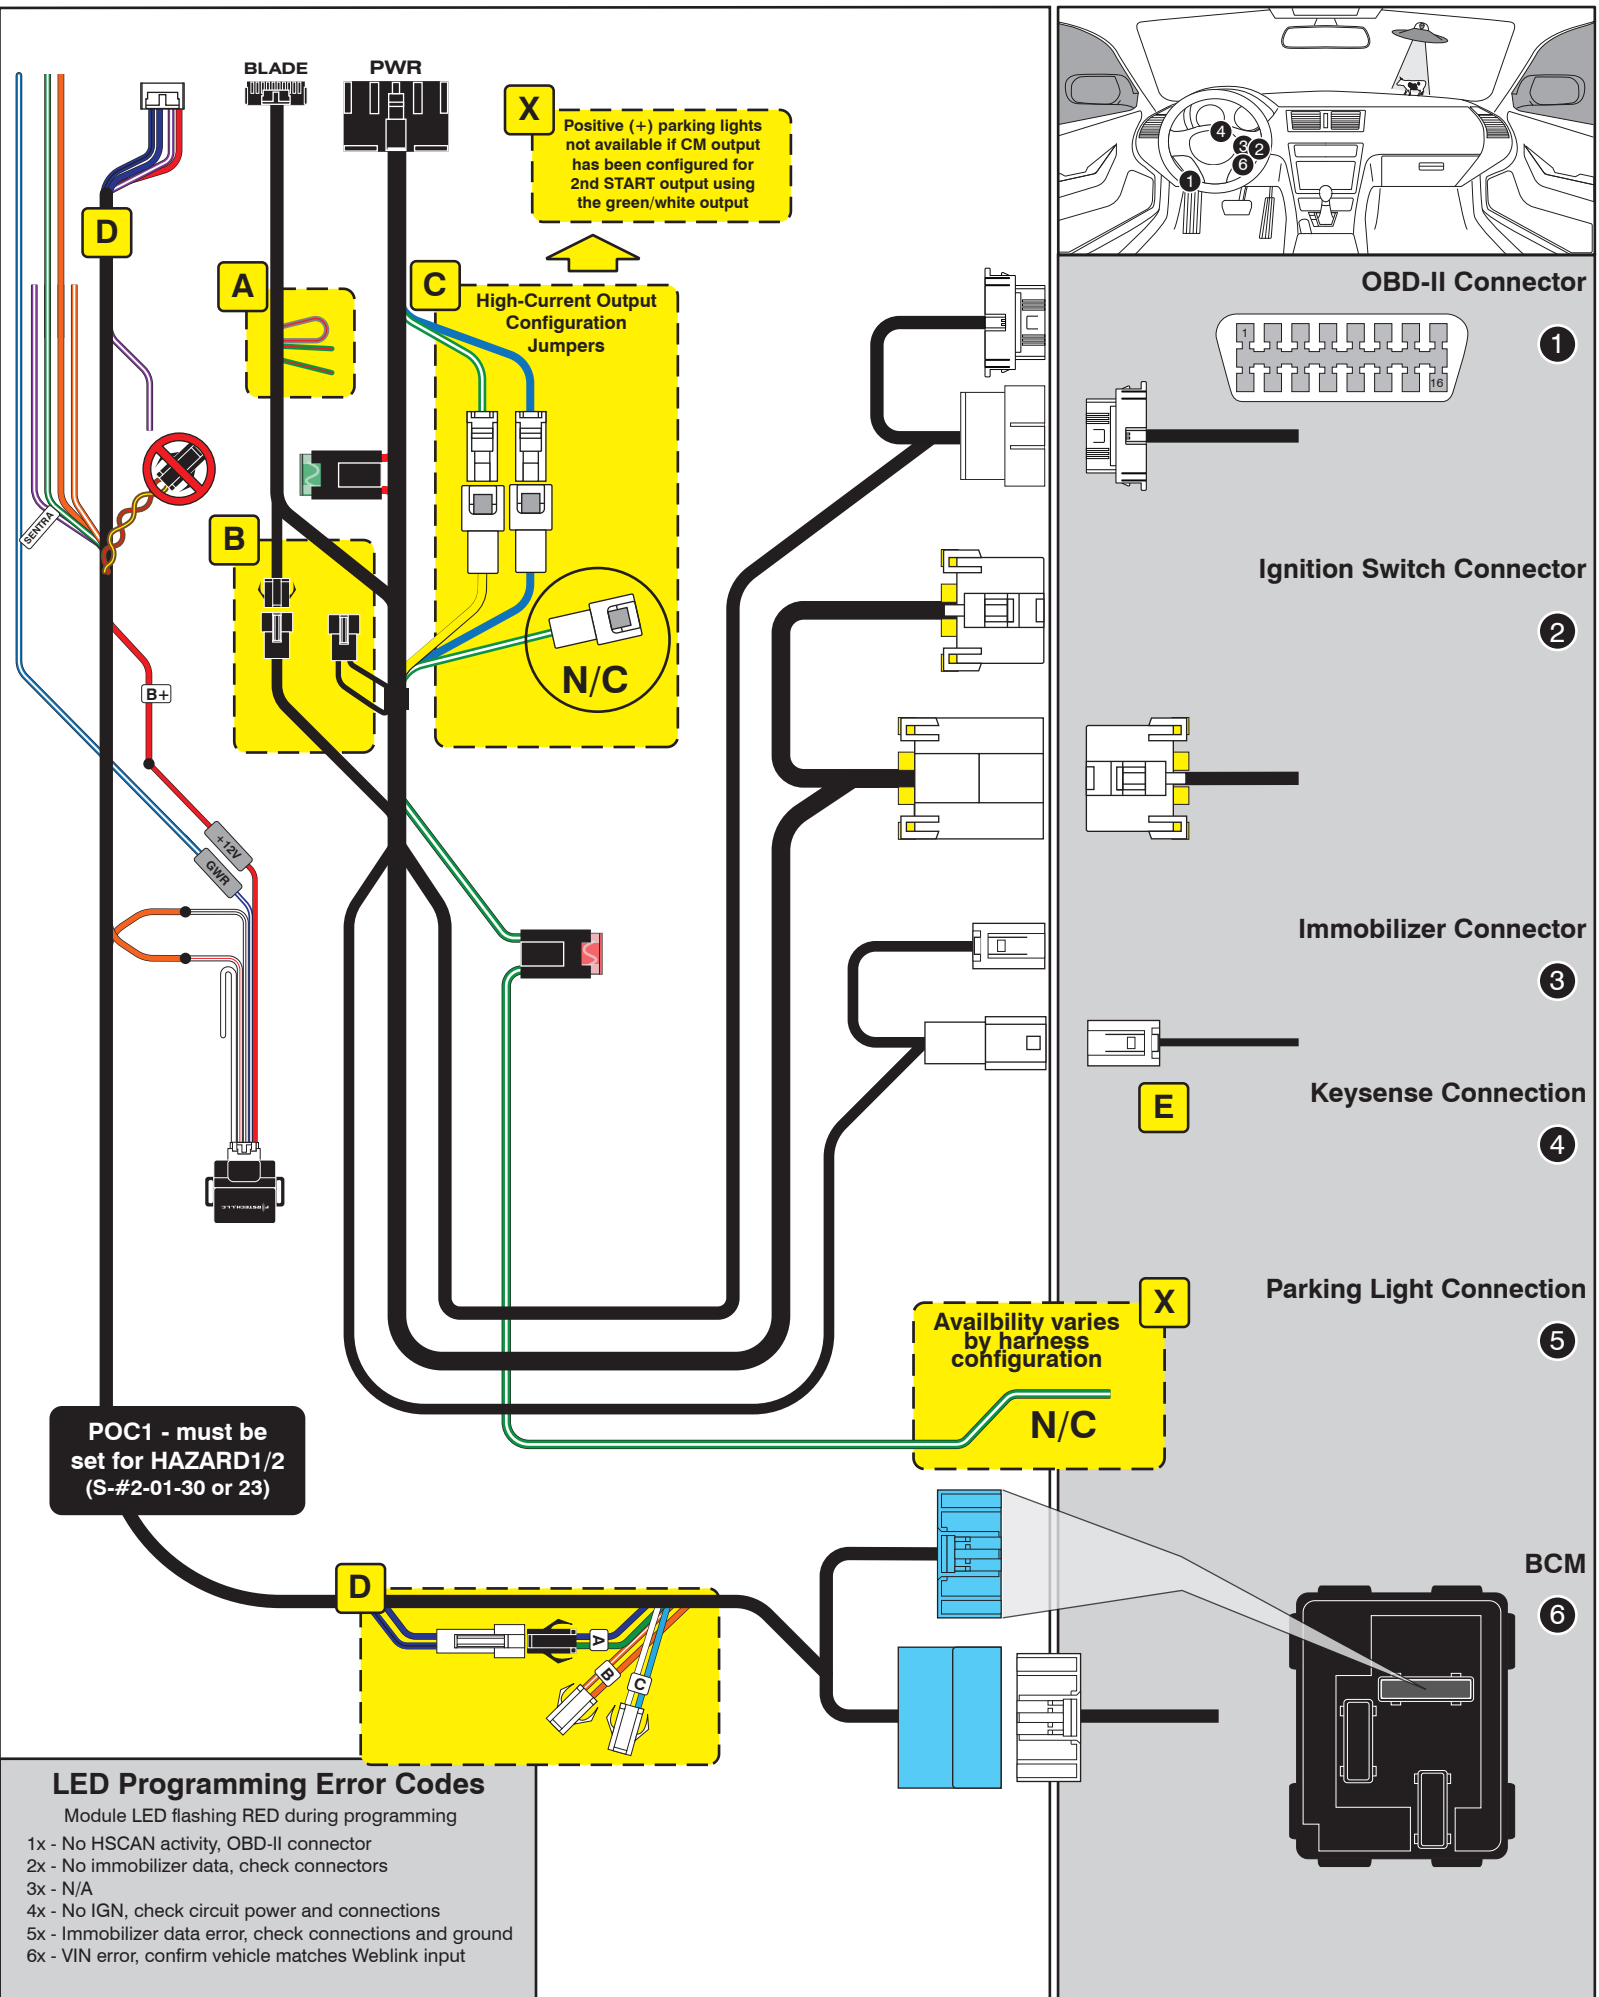

CARTRIDGE INSTALLATION

1

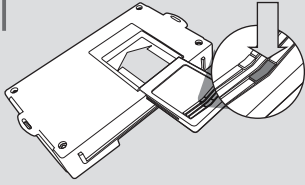

Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE


I To complete this procedure, use one regular key or one valet key.

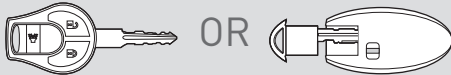

II When programming, all key fobs must be located at least 10 feet away from the vehicle.

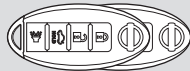


1




Insert key into ignition.

2




Turn key to ON position.

3

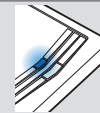

Wait, LED will turn solid BLUE for 2 seconds.

4

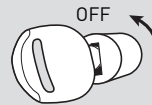

Turn key to OFF position.

5

Module Programming Procedure completed.