FTI-TLP2: Vehicle Coverage and Preparation Notes

FT-DAS Required for manual transmission.

Parking Light () (+)Door Trigger In

Trunk T Starter Starter

Parking Light (Default)

(-)Door Trigger In

Cut loop for A/T

(Default)

 BOTH Red & Red/White MUST be connected with high current application Jumper Setting

Accessory 🗉 🖬 🗐

CM7000/7200

MAKE	MODEL	YEAR	INSTALL	PTS	LIGHTS	STARTER	DCM	I/O CHANGES
DL-TL7 Toyota	Corolla PTS AT	2021-22	Type 6	Optional	Park / Auto Type 2	No		Green White/Blue n/a

This installation requires **BLADE-AL(DL)-TL7** firmware, flash module and update controller before beginning the installation.

Install Type 6: Main Body ECU (driver side kick panel), steering lock connector, and DCM cut required.

Page 2: Version 1 harness, yellow starter wire (no connection), additional relay required for auto-lights. **Page 3:** Version 2 harness, green/white starter/parking light wire (no connection).

Lights: Parking lights are handled using the pre-terminated **green/white** wire bundled with the BLADE connector, Autolight control requires an additional relay and wiring. Remove the (-) pk light wire from the controller's gray I/O connector and replace with the one specified, for status and diagnostic reporting. Connect relay and wiring to the headlight switch connector [B] as illustrated.

Locks: This installation type requires additional connections to the vehicle door locks to ensure proper synchronization with the OEM remotes. *The 6-pin lock connector is required for correct operation.* Connect to the control module lock output port.


Blue/Yellow (PTS): The PTS wire (blue/yellow) is optional. If Idle Mode is not desired, trim as necessary, then insulate and secure.


Idle Mode is not a supported feature of the FTI-TLP2 Harness: The Idle Mode feature which allows the user to exit a running has been excluded from the FTI-TLP2 harness wiring. If this feature is desired, please refer to the full BLADE installation diagram for the applicable wiring and make the required connection to the vehicle PTS button.


TAKEOVER NOT SUPPORTED: THE VEHICLE WILL SHUT DOWN UPON OPENING DRIVER'S DOOR

FTI-TLP2: Installation and Configuration Notes

- A CONNECTIONS REQUIRED
- **B** CONNECTIONS REQUIRED
- C OPTIONAL CONNECTION
- D NOT REQUIRED
- E CONNECTION REQUIRED

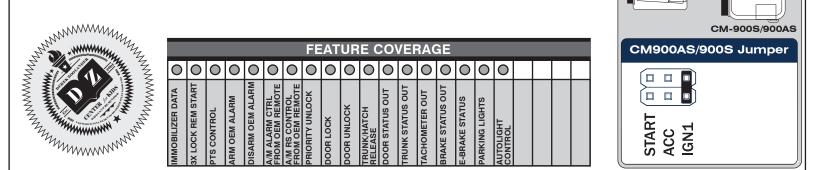

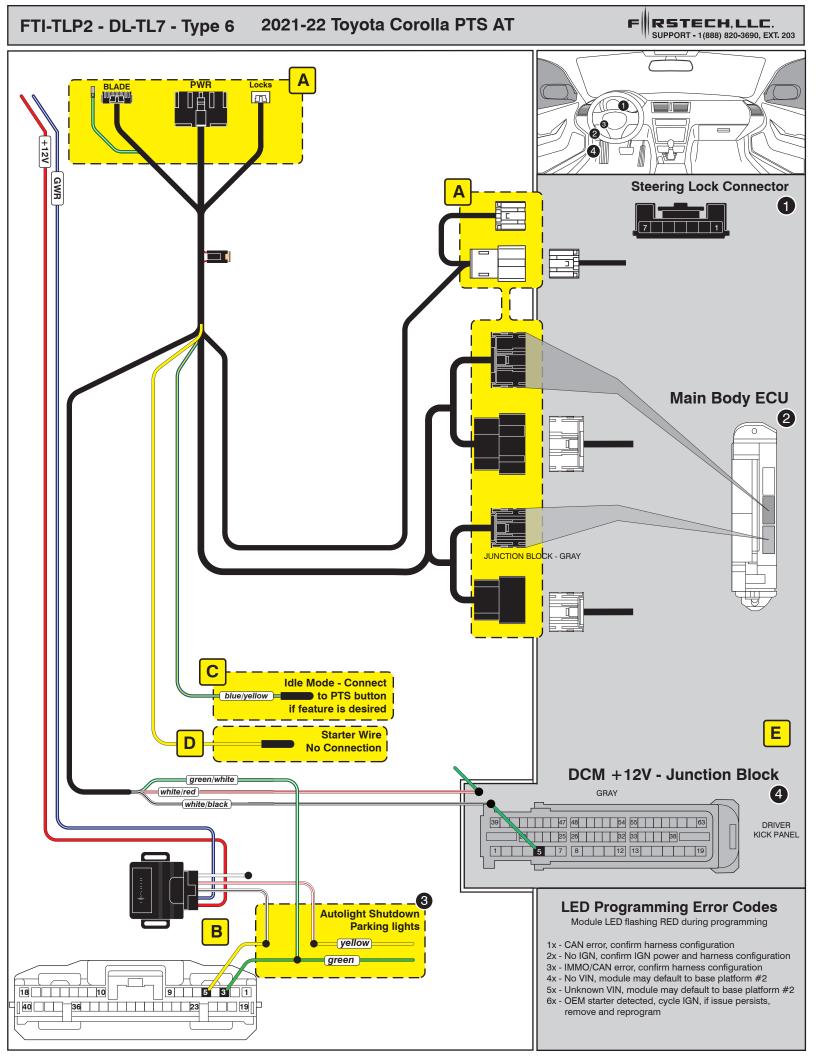

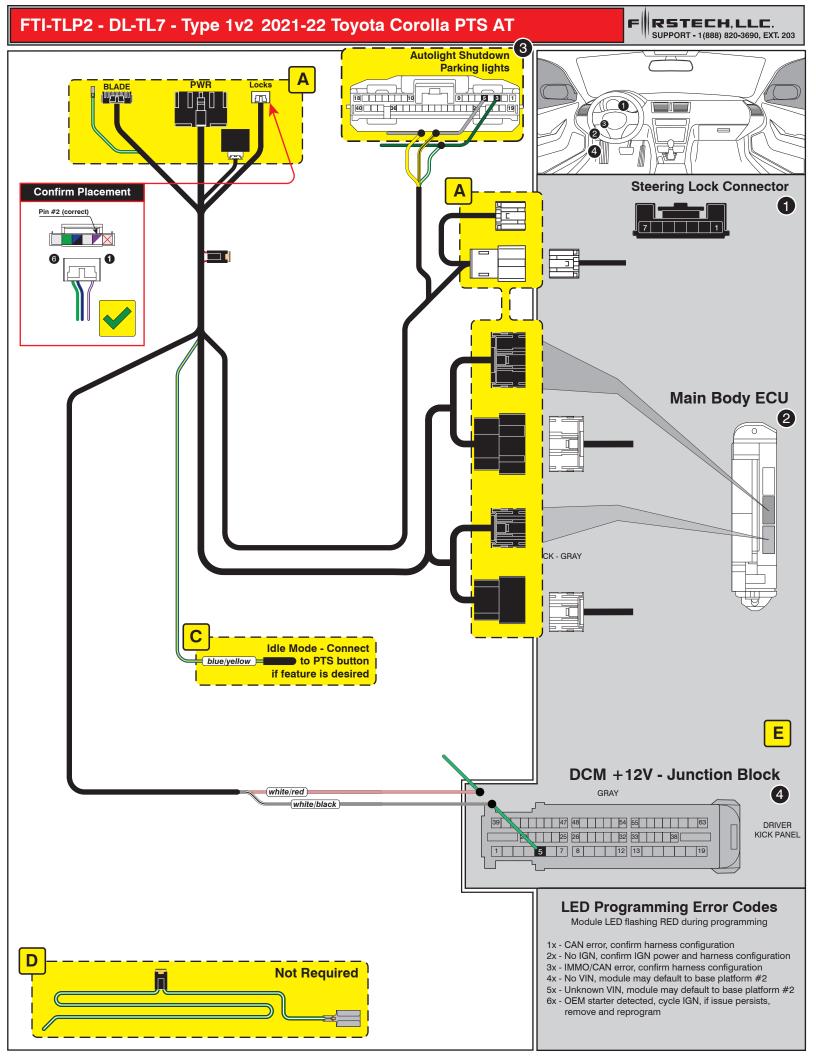

INSTALL GUIDE


BLADE RIES

ALL IN ONE LEXUS TOYOTA

Page 86 of 87

COM-BLADE-AL(DL)-TL7-EN

20210414 Doc. No.: ##75340##

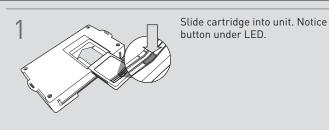

CARTRIDGE INSTALLATION

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

