
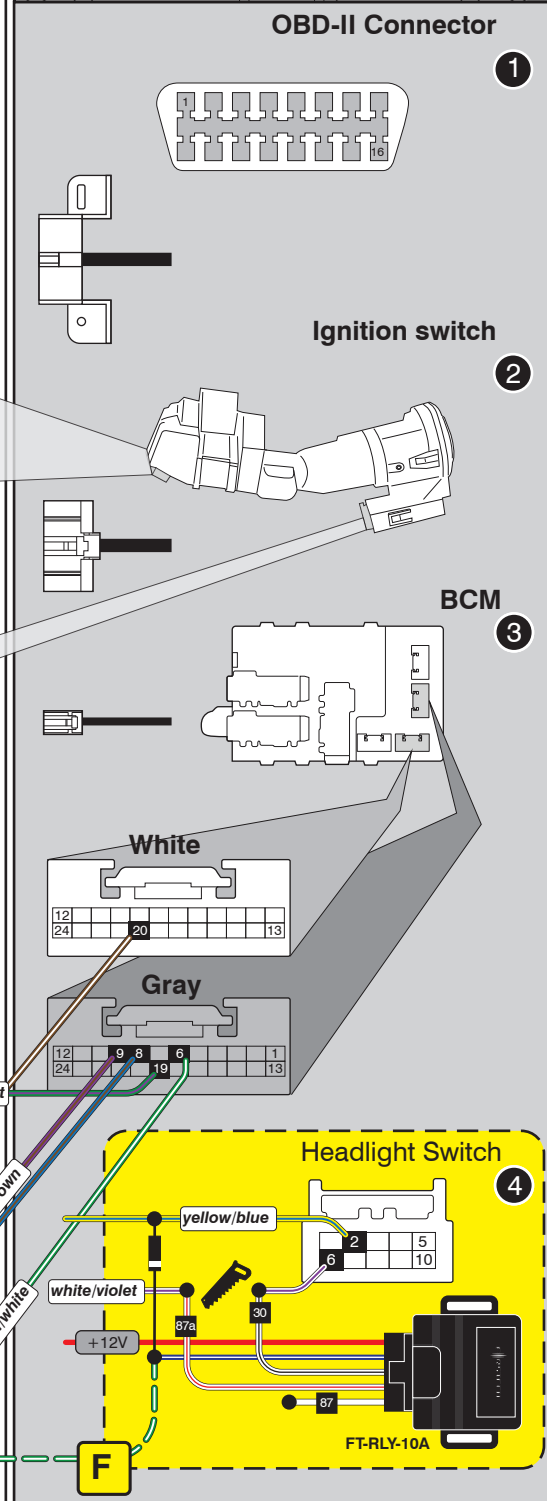


Conéctese a cualquier controlador POC configurado para RAP (S-#2, cualquier POC configurado en la opción [31]) para simular la apertura de la puerta del conductor después de que el arranque remoto se haya apagado.

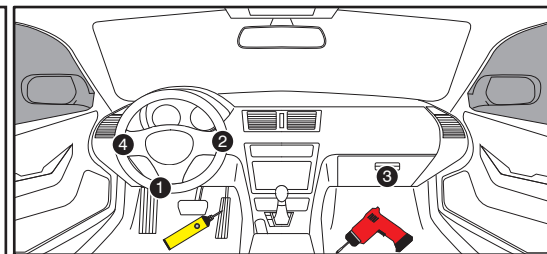

**Códigos de error de programación de LED**  
El LED del módulo parpadea en ROJO durante la programación

- 1x - Error de CAN, verifique el cableado
- 2x - Error de VIN, verifique el cableado CAN
- 3x - Firmware incorrecto
- 4x - Error de VIN, vehículo no identificado
- 5x - Error de aprendizaje del inmovilizador (RX / TX)
- \*\* Parpadeo rojo rápido: problema de RX / TX, cables inversos, confirmar 2 llaves diferentes, confirme que el inmovilizador del vehículo está operativo
- 9x - Introduzca el cilindro, retírelo y continúe

## CARTRIDGE INSTALLATION



1 Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE - 1 OF 2

### NOTE

1 To complete this procedure, both OEM keys are required.

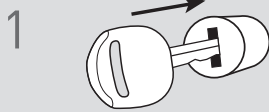

1 Insert key 1 into ignition.



2 Turn key 1 to ON position.




3 LED will turn solid RED.




4 If LED turns solid BLUE, proceed with step 21.

If LED flashes BLUE, proceed with step 5.

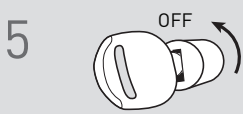

5 Turn key 1 to OFF position.

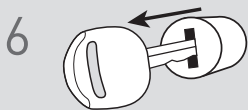


6 Remove key 1.




7 Wait, LED will turn OFF. (This may take up to 30 seconds.)

8

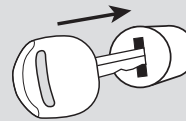

Insert key 1 into ignition.

9

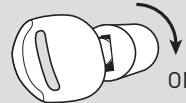


Turn key 1 to ON position.



If the LED begins to flash RED, verify the RX and TX connections between the module and the vehicle.


10

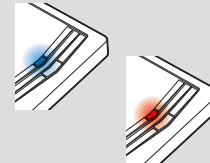

If LED turns solid BLUE for 2 seconds, proceed with step 21.


If LED turns solid RED, proceed with step 11 within 5 seconds, after LED turns OFF.

11

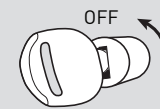


Turn key 1 to OFF position.

12

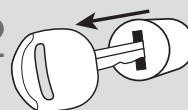

Remove key 1.

13

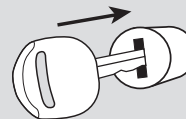


Insert key 2 into ignition.





**IMPORTANT: READ NEXT PAGE !**

## MODULE PROGRAMMING PROCEDURE - 2 OF 2

14  Turn key 2 to ON position.

 **TIME RESTRICTION COMING UP !**

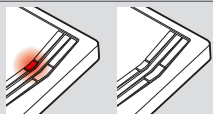15  Wait, LED will turn solid RED then will turn OFF.

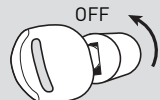
16  **TIME RESTRICTION**  
Complete steps 16 to 20 within 5 seconds.  
Turn key 2 to OFF position.


17  Remove key 2.

18  Press and release programming button.

19  Insert key 2 into ignition.

20  Turn key 2 to ON position.  
Do not start vehicle.

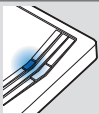21  Wait, LED will turn solid BLUE for 2 seconds.

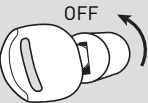22  Turn key 2 to OFF position.

23  Remove key 2.

24  
Module Programming Procedure completed.