

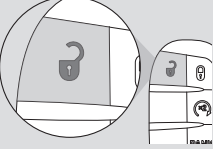










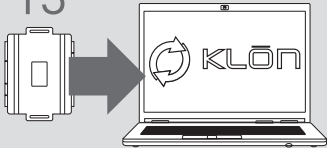








MODULE PROGRAMMING PROCEDURE - WITH KLON

- | | | | | |
|----|--|--|--|--|
| 1 |  | Close driver door. | | |
| |  | Re-open driver door to wake up data bus. | | |
| 2 |  | Press UNLOCK on OEM remote.
If the vehicle is not equipped with an OEM remote, press the module programming button. | | |
| 3 |  | Wait, LED will flash BLUE once [1x]. | | |
| 4 |  | Turn key to ON position. | | |
| 5 |  | Wait, LED will turn solid RED. | | |
| 6 |  | Turn key to OFF position. | | |
| 7 |  | Remove key. | | |
| 8 |  | Insert key into ignition. | | |
| 9 |  | Turn key to ON position. | | |
| 10 |  | Wait, LED will flash BLUE. | | |
| 11 |  | Turn key to OFF position. | | |
| 12 |  | WARNING:
Disconnect power last.
Disconnect RS from vehicle. | | |
| 13 |  | Connect RS to computer and proceed with extended programming. | | |
| 14 |  | WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle. | | |
| 15 |  | Turn key to ON position. | | |
| 16 |  | Wait, LED will turn solid BLUE for 2 seconds. | | |
| 17 |  | Turn key to OFF position. | | |
| 18 |  | Turn key to START position. | | |
| 19 |  | Turn key to OFF position. | | |
| 20 | | Module Programming Procedure completed. | | |

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.



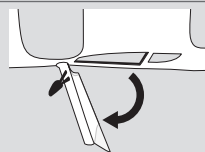
TIME RESTRICTION COMING UP !

1



Press UNLOCK on after-market remote.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

- Open vehicle door.
- Enter vehicle.
- Close vehicle door.
- Insert key into ignition.
- Turn key to ON position.
- Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.