

**POC1 - must be set for HAZARD1/2 (S-#2-01-30 or 23)**


**Versa Clutch - (+) 12V during crank  
Brown, pin #2 of clutch switch, located at the top of the clutch bracket assembly**

**Códigos de error de programación de LED**  
El LED del módulo parpadea en ROJO durante la programación

- 1x - Sin actividad HSCAN, conector OBD-II
- 2x - Sin datos del inmovilizador, verifique los conectores
- 3x - N / A
- 4x - Sin IGN, verifique la alimentación y las conexiones del circuito
- 5x - Error de datos del inmovilizador, verificar conexiones y tierra
- 6x: error VIN, confirma que el vehículo coincide con la entrada del enlace web

## CARTRIDGE INSTALLATION

1

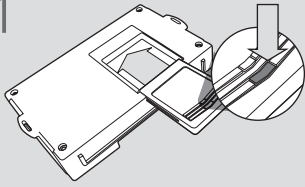

Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.


## MODULE PROGRAMMING PROCEDURE

### NOTE


I To complete this procedure, use one regular key or one valet key.



II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1




Insert key into ignition.

2




Turn key to ON position.

3



Wait, LED will turn solid BLUE for 2 seconds.

4



Turn key to OFF position.

5

Module Programming Procedure completed.