

Make	Model	Year	Install	CAN	Lights	BCM	POC	I/O Changes
DL-NI9 Nissan	Rogue Sport STD Key AT	2017-18	Type 1	BCM	Park / Auto POC 1	DSD	Hazard 1/2	Green White/Blue

NI9 Type 1 install requires **BLADE-AL(DL)-NI9**, flash module and update the controller firmware before installing.

CAN: CAN data is acquired from the BCM using the green harness cable.

POC1: Visual status confirmations and diagnostic information are provided by hazard light connections in the harness assembly, POC1 must be configured for either **Hazard1** (POC option #30 (momentary switch) **or** **Hazard2** (POC option #23 (latching switch)).

Type 1 Door Locks: Connect female white 2-pin door lock connector to male white 2-pin (A) BCM jumper.

CM Unlock Configuration: Proper unlock control requires configuring the controller disarm output to double-pulse disarm. Set feature option 1-13 to setting 2 (Double Pulse).




Vehicle Damage Warning:

Caution should be taken to avoid mixing up the BCM connectors, vehicle damage will result if the connectors are positioned improperly. It is advised that you make the BCM connections one at a time, confirming that each T-harness connection is at the correct BCM position before proceeding to the next connection, attempting to program, or attempting to remote start.

FTI-NSP2: Installation and Configuration Notes

- A** REQUIRED CONNECTIONS - SECURE UNUSED I/O CONNECTORS
- B** REQUIRED CONNECTIONS - SEE WARNING ABOVE
- C** REQUIRED CONNECTION - REQUIRES CONFIGURATION (Option 1-13 to 2)

- FT-DAS Required for manual transmission.
- BOTH Red & Red/White MUST be connected with high current application.

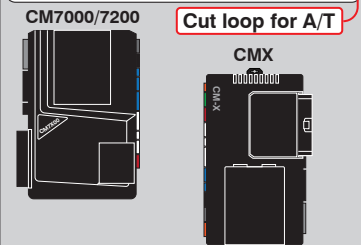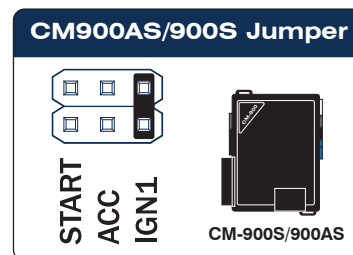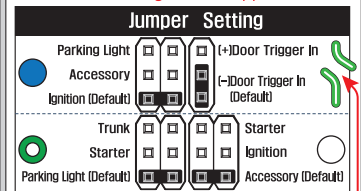


FEATURE COVERAGE														
IMMOBILIZER DATA														
DOOR LOCK														
DOOR UNLOCK														
ARM OEM ALARM														
DISARM OEM ALARM														
DOOR STATUS														
TRUNK STATUS														
BRAKE STATUS														
E-BRAKE STATUS														
TACH OUTPUT														
SECURE TAKEOVER														
HAZARD LIGHTS														

CMX High Current Programmable (+) Output Channels

HCP #1 - Parking Light
HCP #2 - Accessory
HCP #3 - Ignition

[2] 2ND START
[3] 2ND IGNITION
[4] 2ND ACCESSORY

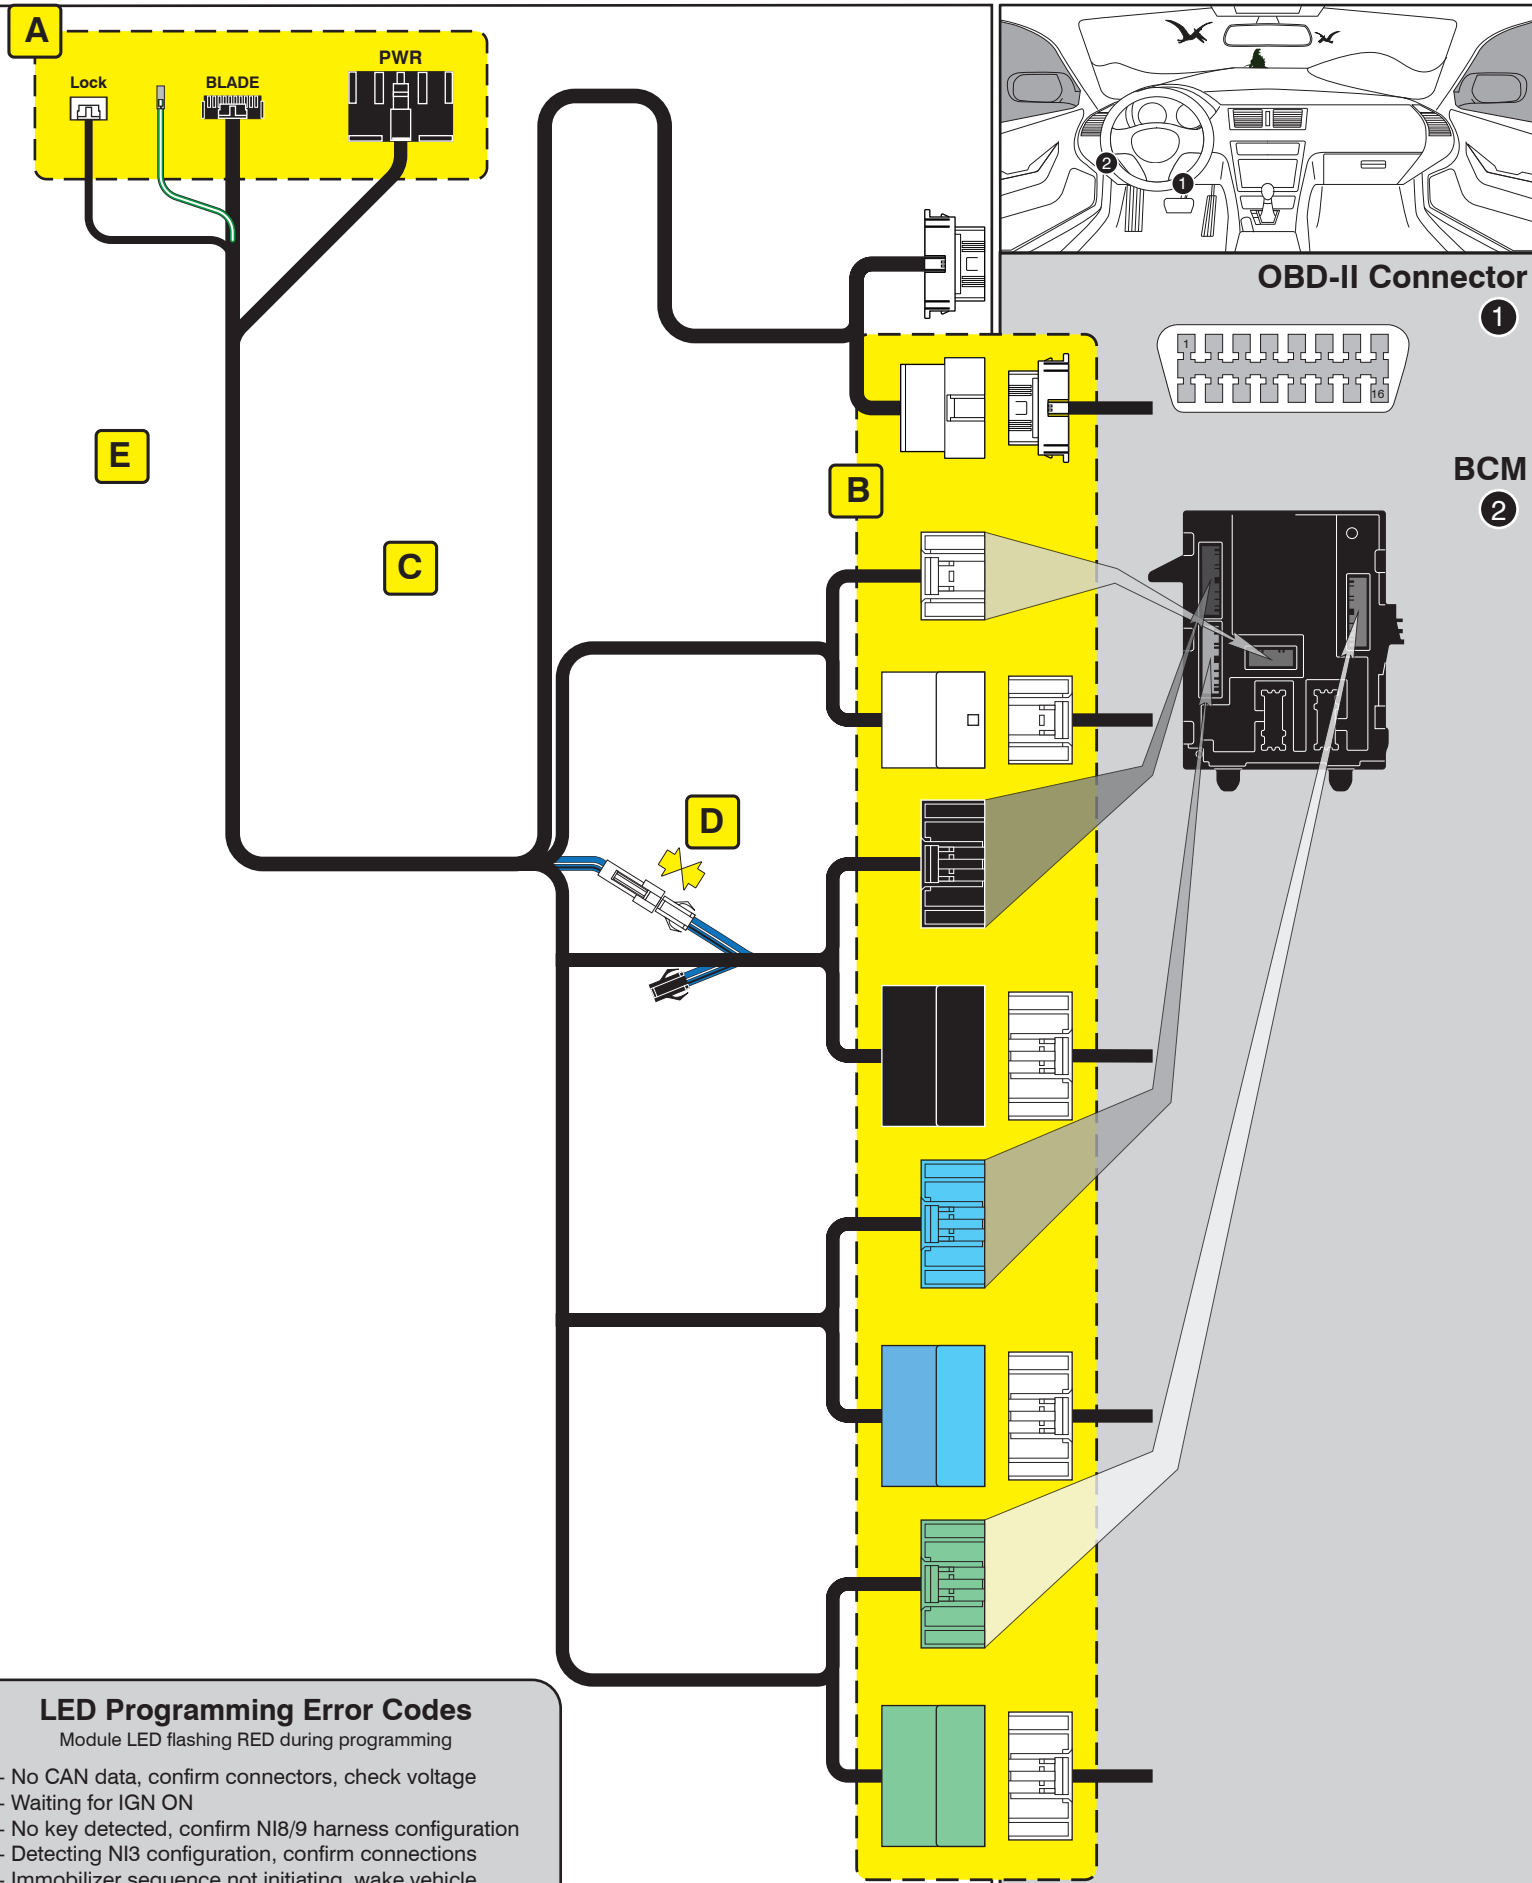


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No CAN data, confirm connectors, check voltage
- 2x - Waiting for IGN ON
- 3x - No key detected, confirm NI8/9 harness configuration
- 4x - Detecting NI3 configuration, confirm connections
- 5x - Immobilizer sequence not initiating, wake vehicle
- 6x - Immobilizer sequence not initiating, reset module, wake vehicle and retry programming, if issue persists, restart
- 7x - Klon data does not match, reset and restart procedure
- 8x - Harness error

CARTRIDGE INSTALLATION

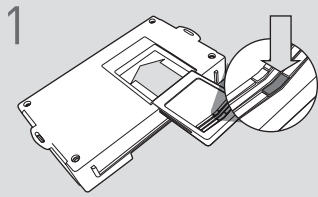

1 Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

1 OFF ACC **ON** START



Set ignition to ON position.

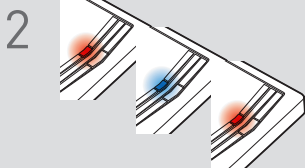

2 Wait, LED will turn solid RED, then solid BLUE for 1 second, then solid RED.

3 OFF ACC ON START



Set ignition to OFF position.



4 Wait, LED will turn OFF.

5 OFF ACC **ON** START



Set ignition to ON position.




6 If LED flashes BLUE rapidly, proceed with step 7. If LED turns solid BLUE for 2 seconds, proceed with step 13.

7 OFF ACC ON START




Set ignition to OFF position.

8



WARNING:
Disconnect power last.
Disconnect module from vehicle.

9

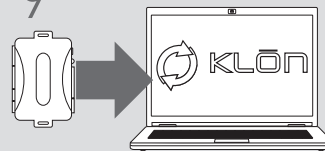

Connect module to computer and proceed with extended programming.

10




WARNING:
Connect power first.
Connect module to vehicle.

11 OFF ACC **ON** START



Set ignition to ON position.

12



Wait, LED will turn solid BLUE for 2 seconds.

13 OFF ACC ON START



Set ignition to OFF position.

14

Module Programming Procedure completed.

