

Make	Model	Year	Install	ECU	Lights	Locks	Trunk/Hatch	I/O Changes
DL-TL6 Lexus	GS 350 PTS AT	2016-20	Type 2	1/DKP	Park / Auto Yes	Mod/DDM	Yellow (8)	Green White/Blue X

This installation requires **BLADE-AL(DL)-TL6** firmware, flash module and update controller before beginning the installation.

Install Type 2: Main Body ECU, driver side kick panel area, optional trunk/hatch connection, lock modification optional, see notes.

CAN: Vehicle CAN data is gathered through the 30-pin connection at the **Main Body ECU**, no other connections are required.

Lights: Parking light and auto-light control are handled using the pre-terminated **green/white** wire bundled with the **BLADE** connector. Remove the (-) pk light wire from the controller's **gray** I/O connector and replace it with the one specified, for status and diagnostic reporting.

Locks: This install requires additional connections to the driver door module (DDM) ensuring proper synchronization with the OEM remotes. **The 6-pin connector must be modified as illustrated, and wires extended to the DDM for correct operation.**

Idle Mode is not a supported feature of the FTI-TLP4 Harness: The Idle Mode feature which allows the user to exit a running has been excluded from the FTI-TLP4 harness wiring. **If this feature is desired, please refer to the full BLADE installation diagram for the applicable wiring and make the required connection to the vehicle PTS button.**

TAKEOVER NOT SUPPORTED: THE VEHICLE WILL SHUT DOWN UPON OPENING DRIVER'S DOOR

FTI-TLP4: Installation and Configuration Notes

- A **REQUIRED CONNECTIONS**
- B **REQUIRED CONNECTIONS**
- C **OPTIONAL CONNECTION**
- D **REQUIRED CONFIGURATION**
- E **MODIFICATION REQUIRED**

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting

Parking Light Accessory Ignition (Default)	[] [] [] [] [] []	(+)-Door Trigger In (Default)	[] [] [] [] [] []	(-)-Door Trigger In (Default)	[] [] [] [] [] []
Trunk Starter Parking Light (Default)	[] [] [] [] [] []	Starter Ignition Accessory (Default)	[] [] [] [] [] []	[] [] [] [] [] []	[] [] [] [] [] []

CM7000/7200 Cut loop for A/T

CM-900S/900AS

CM900AS/900S Jumper

**START
ACC
IGN1**





FEATURE COVERAGE	
IMMOBILIZER DATA	○
PTS CONTROL	○
ARM OEM ALARM	○
DISARM OEM ALARM	○
A/M CONTROL FROM OEM REMOTES	○
A/M RS CONTROL	○
FRMO OEM REMOTE	○
PRIORITY UNLOCK	○
DOOR LOCK	○
DOOR UNLOCK	○
TRUNK/HATCH RELEASE	○
TACH OUTPUT	○
BRAKE STATUS	○
E-BRAKE STATUS	○
DOOR STATUS	○
TRUNK STATUS	○
HOOD STATUS	○
PARKING LIGHTS	○
AUTO LIGHT CONTROL	○


Overview: Mis-Wired door lock connector, field repair required.

Issue: A review of the latest samples of **FTI-TLP4 T-harnesses** has revealed a misplaced trunk output wire in the 6-pin Lock Accessory Connector requiring that the wire be relocated to the correct position, to ensure safe operation when used. **Using the harness without addressing the issue will result in failed trunk/hatch control, and possible damage to the vehicle BCM.**

Correction: The harness purple/white wire in the latest production run of FTI-TLP4 harnesses has been inserted in the position normally used for the +12V power connection in the accessory harness. Before completing the installation, the installer must relocate the harness purple/white wire to the correct position, 1 space inward on the 6-pin connector, see illustrations below in Fig. 2.

To relocate the terminal, using a fine pick or Olfa type knife, depress the terminal locking barb and pull the purple/white wire from the connector housing. Once the terminal has been removed from the housing, again using the pick or knife, lift the locking barb about 1/16" (1.5 mm) and reinsert the terminal in the correct position. If upon initial examination of the harness the lock accessory connector looks like the illustration in Fig. 2, no modification is necessary, the wire is in the proper position.

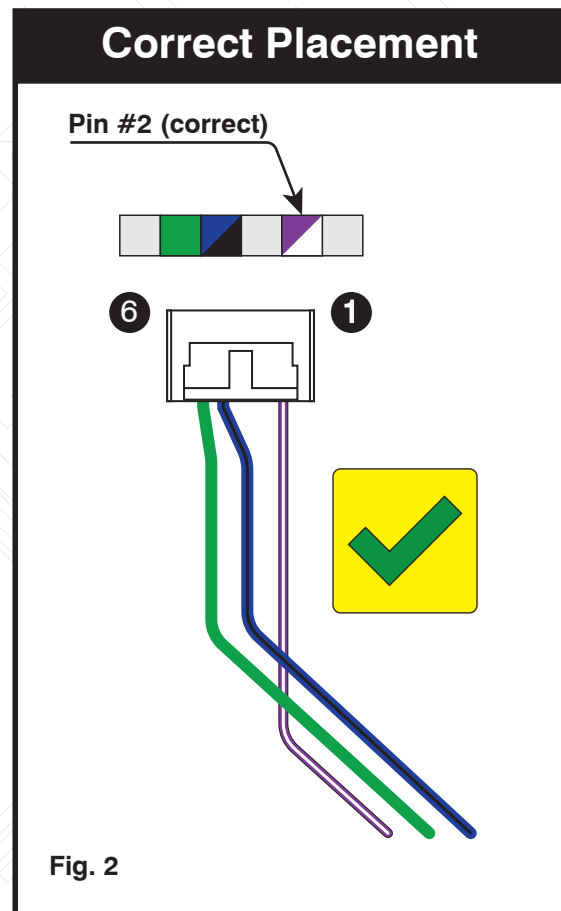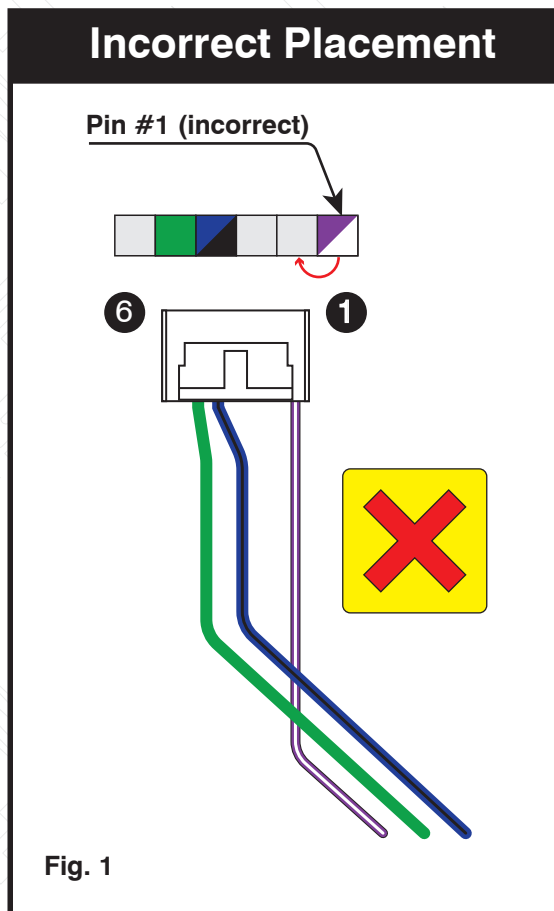


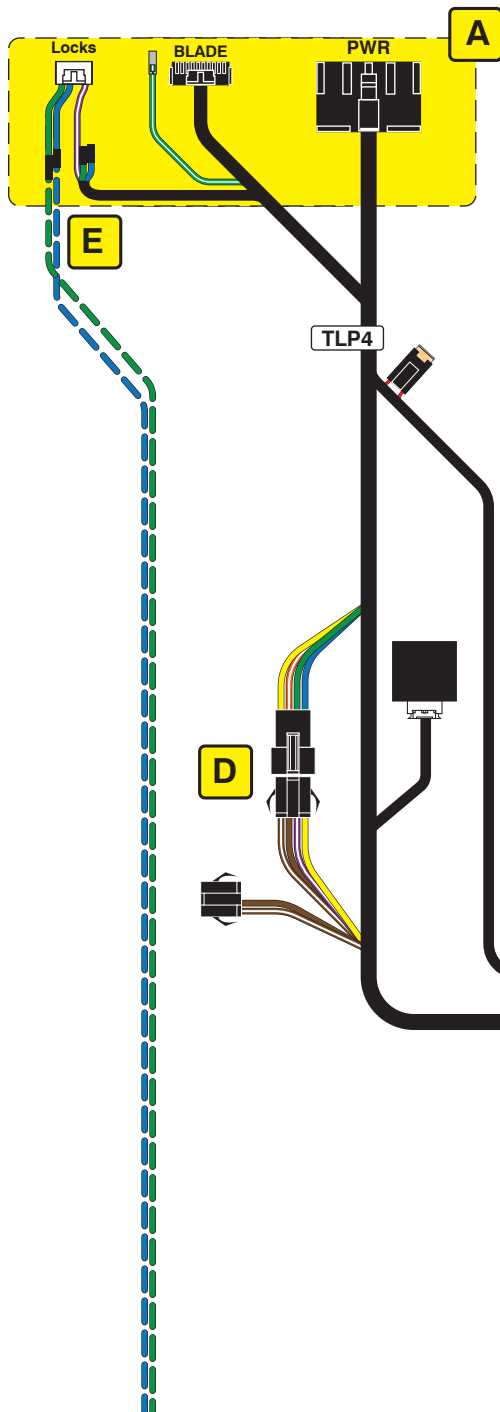

Steering Lock Connector 1




Main Body ECU 2

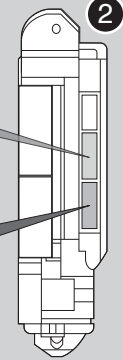

E Door Lock Connections

Driver's Door module

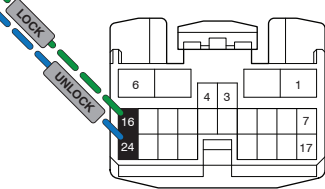

OPTIONAL CONNECTIONS:
If connected, OEM and aftermarket remotes will always be synchronized.

If not connected, user must lock vehicle doors using OEM remote or door request switch after operating vehicle, every time.


For more information, read "Warning: Door Lock Synchronization", in the BLADE install document.

LED Programming Error Codes

- Module LED flashing RED during programming
- 1x - No CAN detected, check connections
 - 2x - VIN not read, check connections
 - 3x - VIN unknown, force platform
 - 4x - No IMMO
 - 5x - OEM remote starter detected, remove
 - 6x - Key platform detected, check connections
 - 7x - No RX detected, check connections
 - 8x - No TX detected, check connections

TAKEOVER NOT SUPPORTED: THE VEHICLE WILL SHUT DOWN UPON OPENING DRIVER'S DOOR

CARTRIDGE INSTALLATION

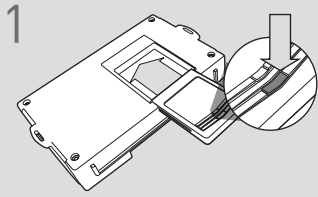

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE

1 Between each step, LED will turn solid RED, this is the default standby mode.




1 Push start button twice [2x] to ON position.

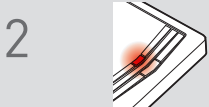


2 LED will turn solid RED.




3 Within 5 seconds, LED will flash BLUE rapidly.



4 Push start button once [1x] to OFF position.

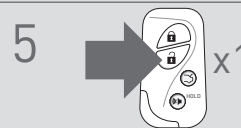

5 Press unlock button once [1x] on OEM keyfob.



6 Wait, LED will turn solid BLUE for 2 seconds.

7

Module Programming Procedure completed.

TAKEOVER NOT AVAILABLE