


**Caution:** Using the wrong connector will damage the light switch. Please refer to the light configuration notes on the coverage page.

**Takeover not supported:** Vehicle engine will shut down when doors are opened.

- LED Programming Error Codes**
- Module LED flashing RED during programming
  - 1x - CAN error, check connectors
  - 2x - Klon error, check connections, retry programming if error persists, perform a clearing flash then retry programming with all doors closed
  - 3x - Immobilizer error, check connectors, confirm car starts
  - 4x - VIN error, check connectors, re flash using vehicle entry

## CARTRIDGE INSTALLATION

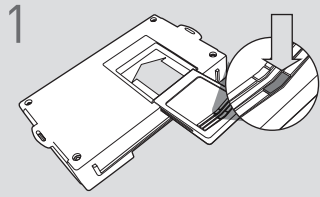


1 Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE

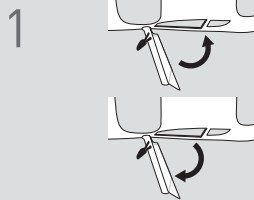

1 Close driver door.


Re-open driver door to wake up data bus.

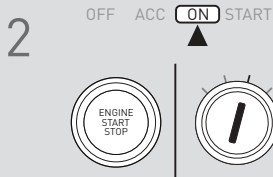


2 Turn ignition to ON position.




3 Wait, LED will flash BLUE rapidly.

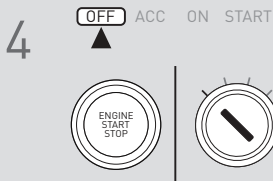


4 Turn ignition to OFF position.

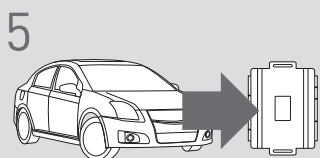


5 **WARNING:**  
Disconnect power last.  
Disconnect RS from vehicle.

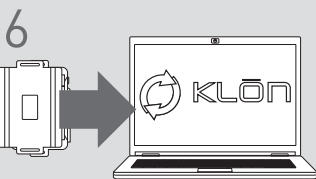

6 Connect RS to computer and proceed with extended programming.

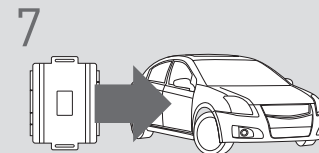


7 **WARNING:** Do not press RS programming button.  
Connect power first.  
Connect RS to vehicle.

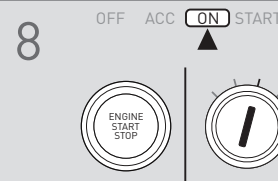

8 Turn ignition to ON position.



9 Wait, LED will turn solid BLUE for 2 seconds.

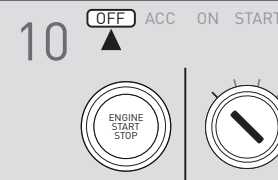

10 Turn ignition to OFF position.



11 Press UNLOCK on the OEM remote.

**!** If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.

12

Module Programming Procedure completed.