


Las conexiones de embrague 1/2 proporcionan manipulación necesaria de los circuitos de embrague del vehículo, simulando una persona sujetando el embrague.

Modificar el freno 1/2 incluido arnés para proporcionar + 12V al Clutch1 circuito, y agregue un relé para romper el circuito Clutch2. La el relé debe ser controlado por un POC configurado en 2do ARRANQUE (2).


**Modificación Requerido**  
Ver página siguiente

**\*Not Required NI5 PTS/IMMO**

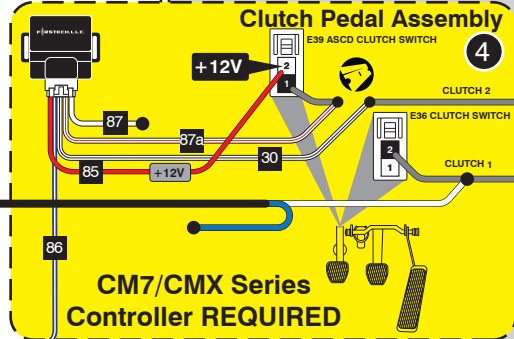


**POC1 - must be set for HAZARD1/2 (S-#2-01-30 or 23)**

**Juke PTS - violet**  
White 100-pin connector, pin #70

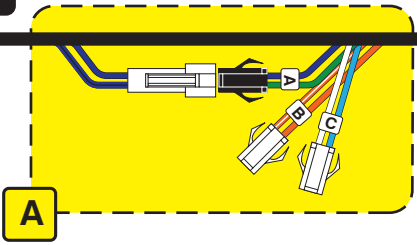

**Códigos de error de programación de LED**  
El LED del módulo parpadea en ROJO durante la programación

1x - Error de CAN, confirmar conexiones	9x - Llave diferente en uso
2x - No hay señal PTS, verifique las conexiones	10x - Sin señal PTS
3x - Sin IGN, verifique el voltaje en OBD-II	11x - Sin datos del inmovilizador
4x - Sin estado de freno, verifique las conexiones	12x - Error de Klon, rehacer con las puertas cerradas
5x - Sin datos del inmovilizador, solo una llave	13x - Sin encendido
6x - Sin freno, conexiones	
7x - Sin freno, conexiones	
8x - Sin datos del inmovilizador	

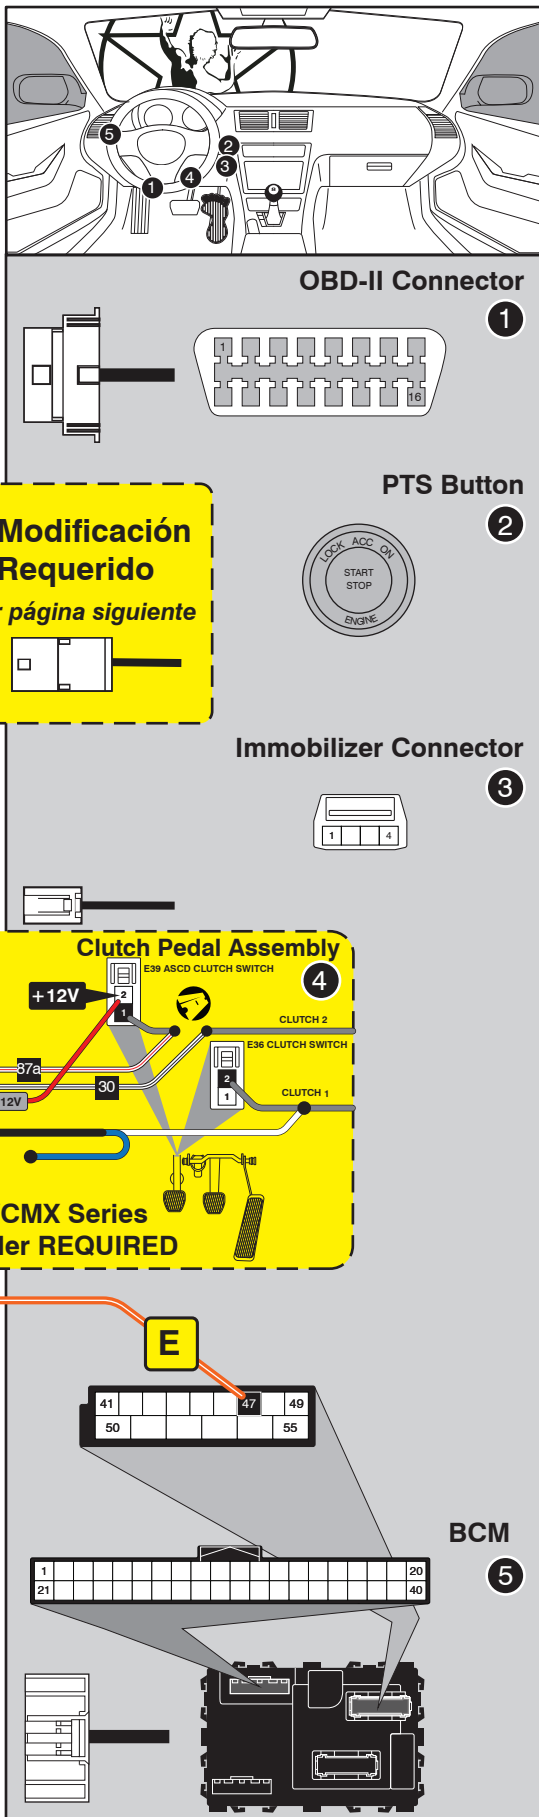

Las siguientes instalaciones de vehículos requieren modificar el FTI-NSP1 Conector PTS para realizar un arranque remoto exitoso:

- Nissan Cube 2009-14
- Nissan Juke 2011-17
- Nissan Sentra 2013-19
- Nissan Versa sedán 2013-19
- Nissan Versa Nota 2014-19

Paso 1 de la modificación (Figura 1) normal configuración del conector PTS, con el Cable de control PTS en la posición # 4 del conector de 8 pines conector.

Esta instalación requiere una conexión al cable en la posición # 8 del conector, como se ilustra en la figura 4, a continuación. □

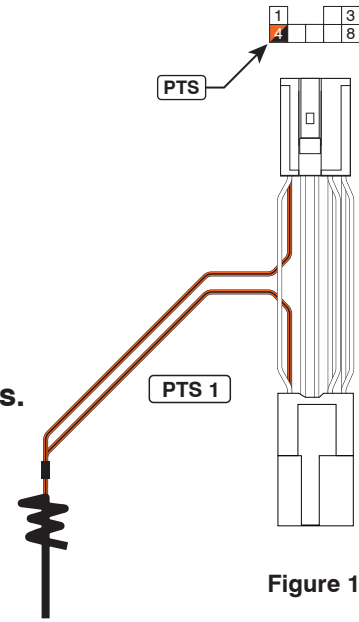


Figure 1

Paso 2 de la modificación (Figura 2), corte y pele la conexión PTS existente. Paso 3 vuelve a conectar el circuito PTS (se prefiere soldar) y aísla la conexión. Paso 4 conecte el circuito PTS del arnés al cable en el pin # 8 del botón PTS conector (se prefiere de nuevo la soldadura) y asegure las conexiones para evitar posibles daños o cortocircuitos.

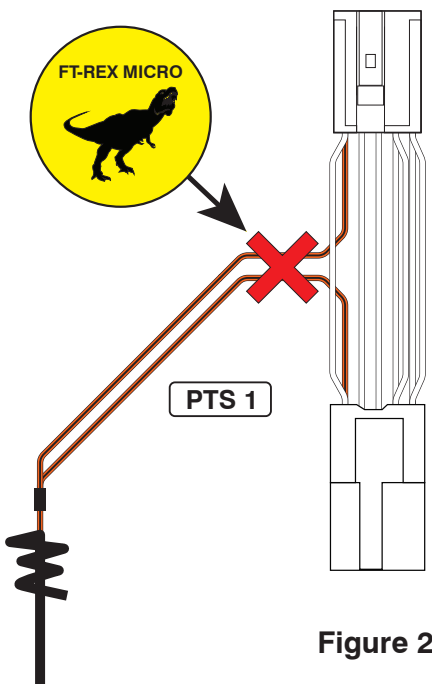


Figure 2

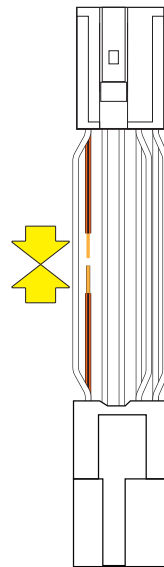


Figure 3


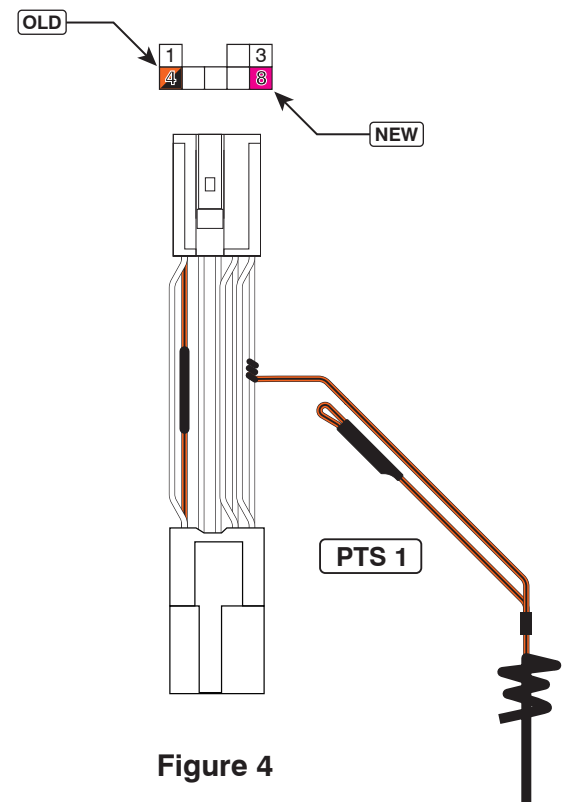


Figure 4

## CARTRIDGE INSTALLATION

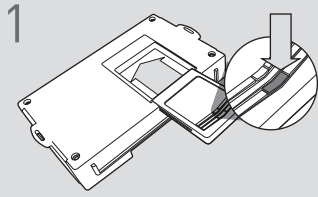

1 Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE - WITH KLON - 1 OF 2

### NOTE


- 1 When programming, only one key fob will be used. The other one must be located at least 10 feet away from the vehicle.

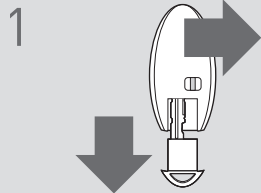

1 Remove valet key from keyfob 1.



2 Remove battery from keyfob 1.

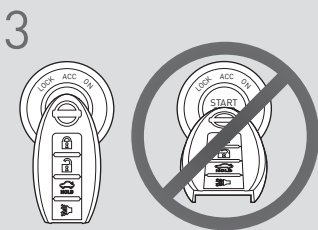

3 Place and hold keyfob 1 on push start button. (No battery)

Keyfob transponder is located behind keyfob logo.




**IMPORTANT:** Place and hold keyfob 1 on push start button for steps 3 to 10.



Push start button twice [2x] to ON position.

5

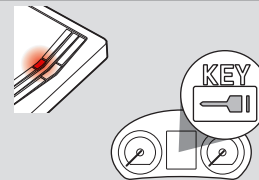

LED will turn solid RED. Wait 12 seconds or until the security light flashes. (The security light may not appear.)


6



AT: Press and release brake pedal once [1x].

MT: Press and release both brake and clutch pedals at the same time, once [1x].

7

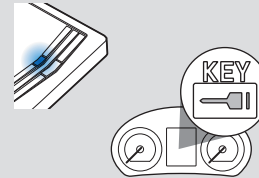

LED will turn solid BLUE. Wait 12 seconds or until the security light flashes. (The security light may not appear.)


8



AT: Press and release brake pedal once [1x].

MT: Press and release both brake and clutch pedals at the same time, once [1x].

9




Wait, LED will flash BLUE rapidly.

10



Push start button once [1x] to OFF position.

11

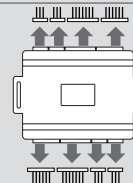

Disconnect all connectors from remote starter except the power connector.



**IMPORTANT: READ NEXT PAGE !**


## MODULE PROGRAMMING PROCEDURE - WITH KLON - 2 OF 2

12

Disconnect the power connector.

13

Remove remote starter from vehicle.



14

Connect remote starter to computer.




15

Proceed with extended programming.




16

Connect remote starter to vehicle.



17

Place and hold keyfob 1 on push start button. (No battery)

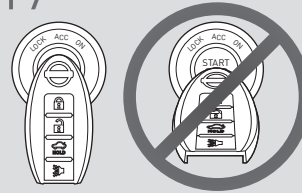

Keyfob transponder is located behind keyfob logo.

Wait until the security light turns OFF.




**IMPORTANT:** Place and hold keyfob 1 on push start button for steps 17 to 20.

18



Push start button twice [2x] to ON position.

19



Wait, LED will turn solid BLUE for 2 seconds.

20



Push start button once [1x] to OFF position.

21

Module Programming Procedure completed.

## WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

### IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

## TAKE OVER PROCEDURE - PUSH TO START - TO THE VEHICLE OWNER

### NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.




**TIME RESTRICTION COMING UP !**

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2

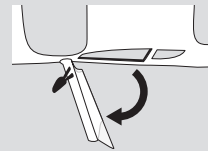

### TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.  
Enter vehicle.  
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.