

FTI-TLK80: Vehicle Coverage and Preparation Notes

Make	Model	Year	Install/Adapter	CAN	Lights	SIL	Locks	I/O Changes
DL-TL5 Toyota	RAV4 80 bit STD Key AT	2011-12	Type 1 Type A	OBD-II	Park / Auto 3 / No	N/A	N/A	Green White/Blue START 2

Type 1 installation requires **BLADE-AL(DL)-TL5**, flash module and update controller firmware before beginning the installation.

Ignition Adapter: This installation requires using the **Type A** ignition adapter, using any other adapter will result in malfunction and possible vehicle damage.

CAN: Vehicle CAN data is gathered from the OBD-II connector, proper configuration of the harness CAN selection jumpers is also required. Configure as illustrated, using the **white** 2-pin connector.

Parking Lights: Park light and auto-light control are handled using the pre-terminated **green/white** wire bundled with the BLADE connector. Remove the (-) pk light wire from the controller's gray I/O connector and replace it with the one specified, for status and diagnostic reporting.

Door Locks: Connections vary by vehicle equipment and trim level, refer to wiring diagram for specific connections. Make no alternate connections, and secure all unused wires for safety.

I/O Changes: If indicated above, change the controller output from **Parking Light** to **START**:

- CM7 controllers - move jumper 3 to STARTER position
- CMX controllers - change HCP #1 to 2ND START (setting 2)
- CM900 controllers - set feature option 1-6 to 2.

If issues arise disarming the OEM alarm during remote start, set option 1-01 to 2.




Vehicles not equipped with Immobilizer: Connect black jumper to the white 2-pin connector marked **NO IMMO** before programming the module to the vehicle.

FTI-TLK80: Installation and Configuration Notes

- A** REQUIRED CONNECTOR - ADAPTER A
- B** REQUIRED CONFIGURATION - OBD-II
- C** REQUIRED CONFIGURATION
- D** REQUIRED CONFIGURATION
- E** NO CONNECTION

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting			
Parking Light	<input type="checkbox"/>	<input type="checkbox"/>	(+)Door Trigger In
Accessory	<input type="checkbox"/>	<input type="checkbox"/>	(-)Door Trigger In
Ignition (Default)	<input type="checkbox"/>	<input type="checkbox"/>	(Default)
Trunk	<input type="checkbox"/>	<input type="checkbox"/>	Starter
Starter	<input type="checkbox"/>	<input type="checkbox"/>	Ignition
Parking Light (Default)	<input type="checkbox"/>	<input type="checkbox"/>	Accessory (Default)

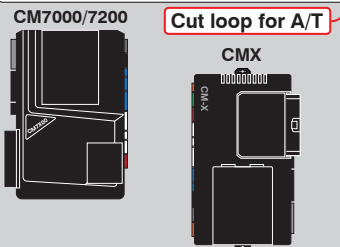

FEATURE COVERAGE															
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
IMMOBILIZER DATA	A/M RS CONTROL FROM OEM REMOTE	A/M ALARM CTRL FROM OEM REMOTE	ARM OEM ALARM	DOOR LOCK	DOOR UNLOCK	PWR SLIDING DOOR (LEFT)	PWR SLIDING DOOR (RIGHT)	TRUNK/HATCH RELEASE	TACH OUTPUT	BRAKE STATUS	E-BRAKE STATUS	DOOR STATUS	TRUNK STATUS	HOOD STATUS	PARKING LIGHTS
AUTOLIGHT CONTROL	SIL/TPMS CIRCUIT INTERRUPT														

CM900AS/900S Jumper



START
ACC
IGN1

CM-900S/900AS


CMX High Current Programmable (+) Output Channels

HCP #1 - Parking Light (Default)
HCP #2 - Accessory (Default)
HCP #3 - Ignition (Default)


[2] 2ND START
[3] 2ND IGNITION
[4] 2ND ACCESSORY

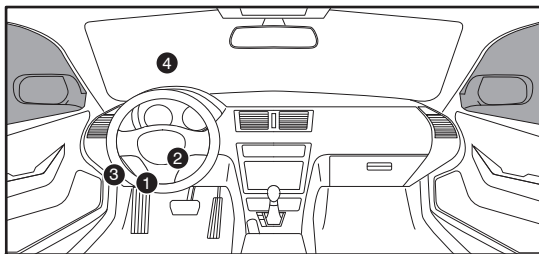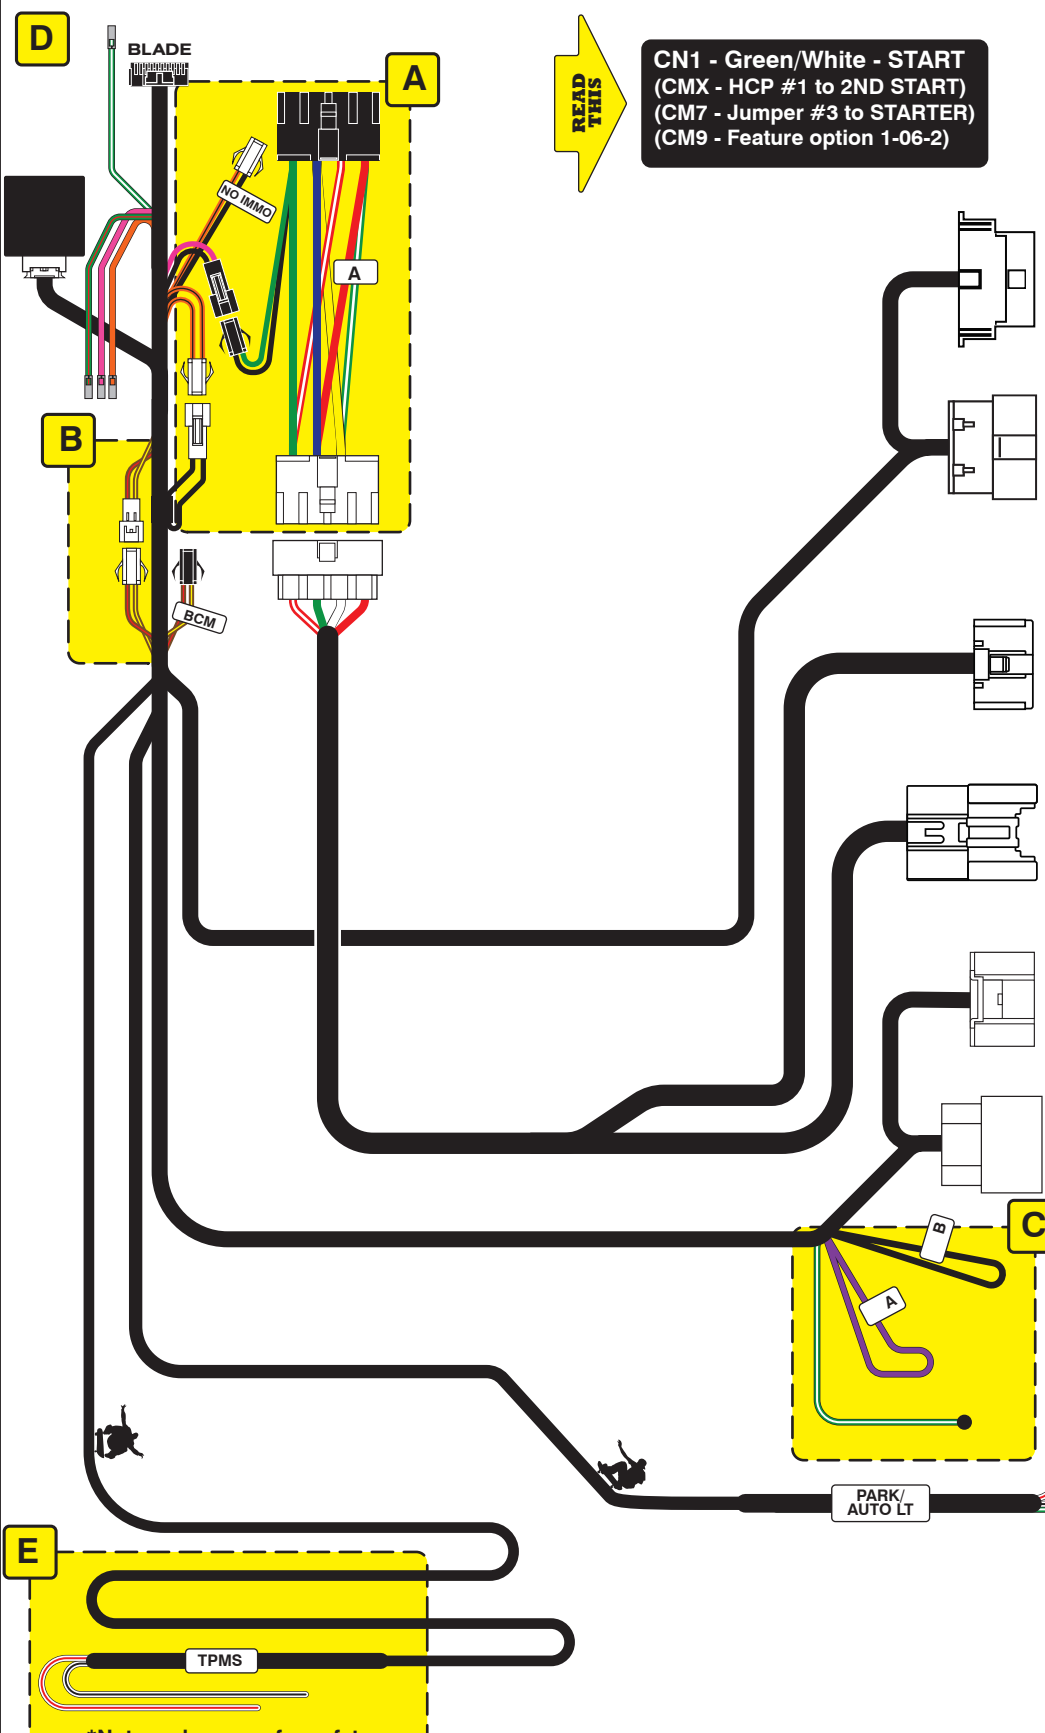

OBD-II Connector

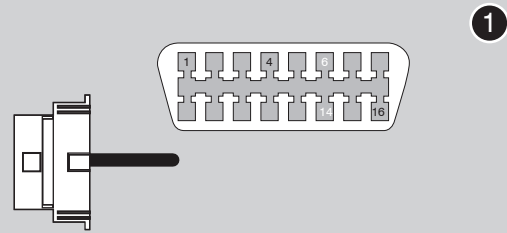


Ignition Switch

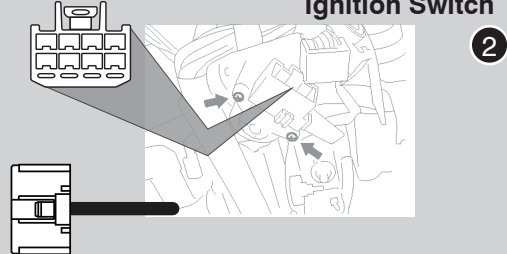

Main Body ECU



Parking Light Switch

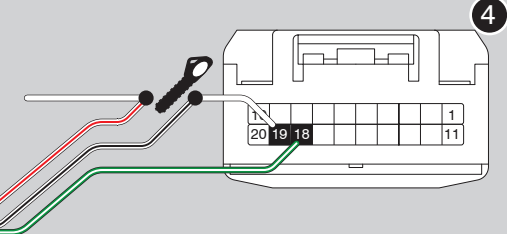


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN error, confirm harness configuration
- 2x - No IGN, confirm connections
- 3x - No IMMO, confirm equipment and connections
- 4x - Unknown VIN, manually assign
- 5x - No IGN on CAN, confirm connections

CARTRIDGE INSTALLATION

1

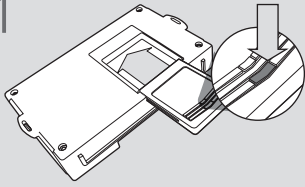


Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

1

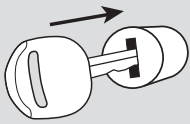


Insert key into ignition.

2

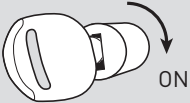


Turn key to ON position.

3

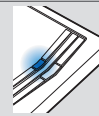

Wait, LED will turn solid BLUE for 2 seconds.

4

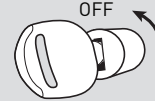

Turn key to OFF position.

5

Module Programming Procedure completed.

